

MANUAL NUMBER 3A8572 | REVISION L | ENGLISH (US)


QUANTM® Pumps, Industrial Models

Electric-operated diaphragm (EODD) pumps with an integral electric drive for fluid transfer applications. For professional use only.




Important Safety Instructions


Read all warnings and instructions in this manual and related manuals before using the equipment. Save these instructions.

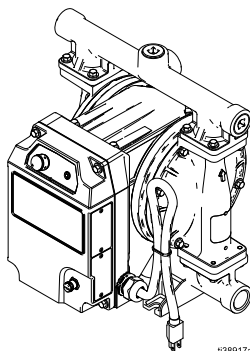graco.com/contact

i38917a

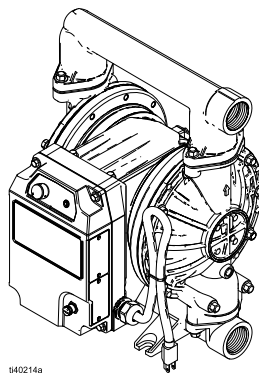i30 (QTC) Model

i40214a

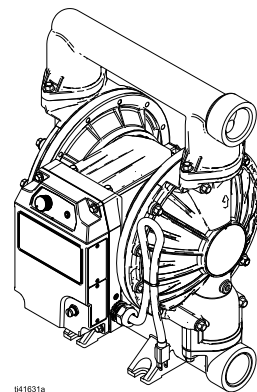i80 (QTD) Model

i41631a

i120 (QTE) Model

CONTENTS

Models and Approvals	3	Operation	53
Related Manuals	4	Pressure Relief Procedure	53
Safety Symbols	5	Before Each Use	53
Warnings	6	Start the Equipment	53
Technical Specifications	11	Prepare the Equipment for Startup	54
Fluid Temperature Range	11	Start and Adjust the Equipment	54
Technical Specifications for i30 (QTC) Models	14	Tips to Reduce Cavitation	54
Technical Specifications for i80 (QTD) Models	16	Select Control Mode	55
Technical Specifications for i120 (QTE) Ball Models	18	Disable Auto-Prime	55
Technical Specifications for i120 (QTE) Flapper Models	20	Shut Down the Equipment	55
Configuration Matrix	22	LED Indicator	56
Motor Module Series Identification	29	Maintenance	59
Component Identification	30	Inspect the Equipment	59
Typical Installation	31	Tighten Fasteners	59
Typical Installation for Ball Models in Ordinary Locations	31	Tighten Connections	59
Typical Installation for Ball Models in Explosive Atmospheres or Hazardous (Classified) Locations	32	Lubricate the Equipment	59
Typical Installation for i120 (QTE) Flapper Models in Ordinary Locations	33	Flush the Equipment	59
Typical Installation for i120 (QTE) Flapper Models in Hazardous (Classified) Locations	35	Store the Equipment	60
Installation	37	Clean the Wetted Section	60
Mount the Pump	37	Clean In-Place (CIP)	60
Orientation of Fluid Inlet and Outlet Ports	38	Clean Out-of-Place (COP)	60
Connect Fluid Lines	38	Troubleshooting	61
Install Leak Sensor Hoses and Fittings	39	Repair	65
Install Fluid Line Accessories	39	Prepare Equipment for Repair	65
Install Fluid Leak Line Accessories	39	Repair the Check Valves (Ball Pumps)	66
Grounding	40	Disassemble the Ball Check Valves	66
Ground the Pump	40	Reassemble the Ball Check Valves	67
Connect a Static Ground	40	Repair the Check Valves (Flapper Pumps)	67
Connect the Electrical Ground	40	Disassemble the Flapper Check Valves	67
Ground the Fluid Lines	40	Reassemble the Flapper Check Valves	68
Ground the Fluid Supply Container	40	Repair the Standard Diaphragms	69
Ground the Pails for Solvents and Sanitizing Solution Used For Flushing	41	Disassemble the Standard Diaphragms	69
Verify Ground Continuity	41	Reassemble the Standard Diaphragms	70
Electrical Connections and Wiring	42	Repair the Overmolded Diaphragms	72
Required Power and Plugs	42	Disassemble the Overmolded Diaphragms	72
Wiring Power Cables	45	Reassemble the Overmolded Diaphragms	73
Requirements for Cables and Conduits	47	Recycling and Disposal	75
Adapters for Plugs and Cables	47	End of Equipment Life	75
I/O Pin Connection	48	Torque Fasteners	76
		Performance Charts	78
		Dimensions	80
		California Proposition 65	85

MODELS AND APPROVALS

The QUANTM® Industrial Pumps are available in various configurations and agency approvals.

Table 1-1: QUANTM Pumps Approvals

MODEL INFORMATION*	APPROVALS
Electric Motor	For motor approvals, see your related motor manual. See Related Manuals .
Pump models with motor code FC2, FE2, FC8, and FE8*	
Pump models with motor code FC4, FE4, FCA, and FEA*	  II 2 G Ex db h IIB T4 Gb NOTE: Type of Protection "h" applied is constructional safety "c."
Note: * See Configuration Matrix for detailed descriptions.	

Table 1-2: QUANTM Pumps Maximum Working Pressure

MODEL	US	METRIC
i30 (QTC)	100 psi	6.89 bar, 0.69 MPa
i80 (QTD)	100 psi	6.89 bar, 0.69 MPa
i120 (QTE) Ball Models	60 psi	4.1 bar, 0.41 MPa
i120 (QTE) Flapper Models	60 psi	4.1 bar, 0.41 MPa

RELATED MANUALS

Additional documents are available to support the operation, repair, and maintenance of the QUANTM® pump. Find English manuals and any available translations at www.graco.com.

ENGLISH MANUAL	DESCRIPTION
3A7637	QUANTM Electric Motor, Repair/Parts
3A8946	QUANTM Pumps, Industrial Models, Parts
3A8861	QUANTM Leak Sensor, Instruction
3A8982	QUANTM I/O Cable Kit (Hazardous Locations), Instruction

SAFETY SYMBOLS

The symbols in this manual provide important safety information to help users operate and maintain the equipment safely and effectively. This table describes the meaning of each symbol.

SYMBOL	MEANING	SYMBOL	MEANING
	Burn Hazard		Toxic Fluid or Fumes Hazard
	Cleaning Solvent Hazard		Do Not Wipe with a Dry Cloth
	Electric Shock Hazard		Eliminate Ignition Sources
	Entanglement Hazard		Follow Pressure Relief Procedure
	Equipment Misuse Hazard		Ground Equipment
	Fire and Explosion Hazard		Read Manual
	Moving Parts Hazard		Ventilate Work Area
	Pressurized Equipment Hazard		Wear Personal Protective Equipment
	Splash Hazard		



Safety Alert Symbol

This symbol indicates: Attention! Become Alert! Look for this symbol throughout the manual to indicate important safety messages.

WARNINGS

The following warnings apply throughout this manual. Read, understand, and follow the warnings before using this equipment. Failure to follow these warnings can result in serious injury.

**DANGER**



SEVERE ELECTRIC SHOCK HAZARD

This equipment can be powered by more than 240 V. Contact with this voltage will cause death or serious injury.

Explosive Atmospheres or Hazardous (Classified) Locations Models (hard wired for permanent connection):

This equipment must be grounded. Improper grounding, setup, or usage of the system can cause electric shock.

- Turn off and disconnect all power before disconnecting any cables and before servicing equipment.
- This equipment must be grounded. Connect only to grounded power source.
- All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.
- Store indoors.

Ordinary Locations Models (cord and plug connection):

This equipment must be grounded. Improper grounding, setup, or usage of the system can cause electric shock.

- Turn off and disconnect power cord before servicing equipment.
- Connect only to grounded electrical outlets.
- Only use 3-wire extension cords for single-phase models. Only use 4-wire extension cords for 3-phase models.
- Ensure ground prongs are intact on power and extension cords.
- Store indoors.
- Wait five minutes after disconnecting power cord before servicing.



WARNING



FIRE AND EXPLOSION HAZARD

Flammable fumes, such as solvent and paint fumes, **in work area** can ignite or explode. Paint or solvent flowing through the equipment can cause static sparking. To help prevent fire and explosion:

- Use equipment only in well-ventilated area.
- Eliminate all ignition sources, such as pilot lights, cigarettes, portable electric lamps, and plastic drop cloths (potential static sparking).
- Ground all equipment in the work area. See **Grounding** instructions in your pump manual.
- Keep work area free of debris, including solvent, rags and gasoline.
- Do not plug or unplug power cords, or turn power or light switches on or off when flammable fumes are present.
- Use only conductive grounded fluid lines.
- **Stop operation immediately** if static sparking occurs or you feel a shock. Do not use equipment until you identify and correct the problem.
- Keep a working fire extinguisher in the work area.

Static charge may build up on plastic parts during cleaning and could discharge and ignite flammable vapors. To help prevent fire and explosion:

- Clean plastic parts only in well-ventilated area.
- Do not clean with a dry cloth.

WARNING



EQUIPMENT MISUSE HAZARD

Misuse can cause death or serious injury.

- Do not operate the unit when fatigued or under the influence of drugs or alcohol.
- Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See **Technical Specifications** in all equipment manuals.
- Use fluids and solvents that are compatible with equipment wetted parts. See **Technical Specifications** in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request Safety Data Sheets (SDSs) from distributor or retailer.
- Turn off all equipment and follow the **Pressure Relief Procedure** in your pump manual when equipment is not in use.
- Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer's replacement parts only.
- Do not alter or modify equipment. Alterations or modifications may void agency approvals and create safety hazards.
- Make sure all equipment is rated and approved for the environment in which you are using it.
- Use equipment only for its intended purpose. Call your distributor for information.
- Route fluid lines, cords, and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.
- Do not kink or over-bend fluid lines, cords, or cables. Do not use fluid lines, cords, or cables to pull equipment.
- Keep children and animals away from work area.
- Comply with all applicable safety regulations.



PLASTIC PARTS CLEANING SOLVENT HAZARD

Many cleaning solvents can degrade plastic parts and cause them to fail, which could cause serious injury or property damage.

- Use only compatible solvents to clean plastic structural or pressure-containing parts.
- See **Technical Specifications** in all equipment manuals for materials of construction. Consult the solvent manufacturer for information and recommendations about compatibility.

 WARNING	
  	PRESSURIZED EQUIPMENT HAZARD Fluid from the equipment, leaks, or ruptured components can splash in the eyes or on skin and cause serious injury. • Follow the Pressure Relief Procedure when you stop spraying/dispensing and before cleaning, checking, or servicing equipment. • Tighten all fluid connections before operating the equipment. • Check fluid lines and connections daily. Replace worn or damaged parts immediately.
	PRESSURIZED ALUMINUM PARTS HAZARD Use of fluids that are incompatible with aluminum in pressurized equipment can cause serious chemical reaction and equipment rupture. Failure to follow this warning can result in death, serious injury, or property damage. • Do not use 1,1,1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents. • Do not use chlorine bleach. • Many other fluids may contain chemicals that can react with aluminum. Contact your material supplier for compatibility.
 	THERMAL EXPANSION HAZARD Fluids subjected to heat in confined spaces, including fluid lines, can create a rapid rise in pressure due to the thermal expansion. Over-pressurization can result in equipment rupture and serious injury. • Open a valve to relieve the fluid expansion during heating. • Replace fluid lines proactively at regular intervals based on your operating conditions.
 	ENTANGLEMENT HAZARD Rotating parts can cause serious injury. • Keep clear of moving parts. • Do not operate equipment with protective guards or covers removed. • Do not wear loose clothing, jewelry or long hair while operating equipment. • Equipment can start without warning. Before checking, moving, or servicing equipment, follow the Pressure Relief Procedure in your pump manual and disconnect all power sources.
	BURN HAZARD Equipment surfaces and fluid that is heated can become very hot during operation. To avoid severe burns: • Do not touch hot fluid or equipment.

 WARNING	
 	MOVING PARTS HAZARD Moving parts can pinch, cut, or amputate fingers and other body parts. • Keep clear of moving parts. • Do not operate equipment with protective guards or covers removed. • Equipment can start without warning. Before checking, moving, or servicing equipment, follow the Pressure Relief Procedure and disconnect all power sources.
	TOXIC FLUID OR FUMES HAZARD Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed. • Read Safety Data Sheets (SDSs) to know the specific hazards of the fluids you are using. • Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.
	PERSONAL PROTECTIVE EQUIPMENT Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. Protective equipment includes but is not limited to: • Protective eyewear and hearing protection. • Respirators, protective clothing, and gloves as recommended by the fluid and solvent manufacturer.

TECHNICAL SPECIFICATIONS

The tables provide important information, including specifications and performance characteristics, of the QUANTM® Industrial Pumps.

FLUID TEMPERATURE RANGE

Use the table to identify the temperature range of the pump materials and the fluids that will contact the pump.

NOTICE

Temperature limits are based on mechanical stress only. Certain chemicals will further limit the fluid temperature range. Stay within the temperature range of the most-restricted wetted component. Operating at a fluid temperature that is too high or too low for the components of your pump may cause equipment damage.

NOTE:

The maximum fluid temperature for Hazardous units should not exceed 230°F (110°C) or the limitation based on the Wetted Section Materials, whichever is lower.

Not all materials in this table are available in all models.

TECHNICAL SPECIFICATIONS

Table 5-1: Fluid Temperature Range by Wetted Section Material

MATERIAL OF WETTED CONTACT SECTION PARTS (SEAT, CHECK, DIAPHRAGM)*	METAL (AL,CI, CP, FG, HS, HT, PH, SS, 3A)*		PLASTIC (PV)*		PLASTIC (AC, CP, PP)*	
	US	METRIC	US	METRIC	US	METRIC
(AC) Acetal	−20° to 180°F	−29° to 82°C	10° to 180°F	−12° to 82°C	32° to 150°F	0° to 66°C
(AL) Aluminum	−60° to 275°F	−51° to 135°C				
(BN) Buna-N	10° to 180°F	−12° to 82°C				
(CO) Polychloroprene Overmold	10° to 180°F	−12° to 82°C				
(CR) Polychloroprene, standard, ball	10° to 180°F	−12° to 82°C				
(CW) Polychloroprene, weighted, ball	10° to 180°F	−12° to 82°C				
(EO) EPDM Overmolded	−40° to 250°F	−40° to 121°C				
(-B) Buna-N Overmold 303 Stainless Steel, flapper	10° to 180°F	−12° to 82°C	N/A		N/A	
(FB) 303 Stainless Steel with Buna-N seals	10° to 180°F	−12° to 82°C	N/A		N/A	
(FK) Fluoroelastomer	−40° to 275°F	−40° to 135°C	10° to 180°F	−12° to 82°C	32° to 150°F	0° to 66°C
(FL) Flapper (SS)	−60° to 275°F	−51° to 135°C				
(GE) Graco Engineered Thermoplastic	−40° to 180°F	−40° to 82°C				
(PO) PTFE/EPDM Overmolded	−40° to 180°F	−40° to 82°C				
(PP) Polypropylene	32° to 175°F	0° to 79°C	32° to 175°F	0° to 79°C		
(PS) PTFE/Santo 2- piece	−40° to 180°F	−40° to 82°C	10° to 180°F	−12° to 82°C		

TECHNICAL SPECIFICATIONS

MATERIAL OF WETTED CONTACT SECTION PARTS (SEAT, CHECK, DIAPHRAGM)*	METAL (AL, CI, CP, FG, HS, HT, PH, SS, 3A)*		PLASTIC (PV)*		PLASTIC (AC, CP, PP)*	
	US	METRIC	US	METRIC	US	METRIC
(PV) PVDF	10° to 225°F	-12° to 107°C				
(SA) 17-4PH SST w/ PTFE o-rings	-40° to 220°F	-40° to 104°C	10° to 180°F	-12° to 82°C	32° to 150°F	0° to 66°C
(SD) 440C Stainless Steel	-40° to 220°F	-40° to 104°C				
(SO) Santoprene Overmolded	-40° to 180°F	-40° to 82°C				
(SP) Santoprene	-40° to 180°F	-40° to 82°C				
(SS) 316 Stainless Steel	-60° to 275°F	-51° to 135°C				
(TP) TPE	-20° to 150°F	-29° to 66°C	10° to 150°F	-12° to 66°C	32° to 150°F	0° to 66°C
Note: * See Configuration Matrix for detailed descriptions.						

TECHNICAL SPECIFICATIONS

TECHNICAL SPECIFICATIONS FOR I30 (QTC) MODELS

Table 5-2: Technical Specifications for QUANTM® i30 (QTC) Models

	US	METRIC		
Maximum fluid working power	100 psi	6.89 bar, 0.69 MPa		
Maximum free-flow delivery	30 gpm	114 lpm		
Maximum size pumpable solids	0.125 in.	3.2 mm		
Fluid flow*	0.08 gal/cycle	0.30 l/cycle		
Environmental temperature range	−4° to 104°F	−20° to 40°C		
Maximum operating altitude	9842 ft	3000 m		
IP rating, ordinary locations models	IP66			
IP rating, explosive atmospheres or hazardous (classified) locations models	IP66			
Electrical ratings				
	Rated Voltage	Phase	Frequency	Current
i30 (QTC) models, FC2/FE2 motor	200–240 V	1	50/60 Hz	10 A
i30 (QTC) models, FC4/FE4 motor	200–240 V	1	50/60 Hz	10 A
i30 (QTC) models, FC5/FE5 motor	100–120 V	1	50/60 Hz	12 A
i30 (QTC) models, FC6/FE6 motor	100–120 V	1	50/60 Hz	12 A
i30 (QTC) models, FC7/FE7 motor	380–480 V	3	50/60 Hz	5.3 A
i30 (QTC) models, FC8/FE8 motor	380–480 V	3	50/60 Hz	5.3 A
i30 (QTC) models, FC9/FE9 motor	380–480 V	3	50/60 Hz	5.3 A
i30 (QTC) models, FCA/FEA motor	380–480 V	3	50/60 Hz	5.3 A
Circuit Protection				
Maximum Branch Circuit Protection Rating	20A, Inverse Time Circuit Breaker			
Short Circuit Current Rating	5 kA			
Materials of construction				
See Configuration Matrix for materials of construction for your equipment model.				
Fluid inlet/outlet sizes				
Models with wetted section materials coded:				
AL, SS, HT	1 in. NPT(f) or 1 in. BSPT			

TECHNICAL SPECIFICATIONS

	US	METRIC
CP, PP, PV, SS with S51 connection	DIN PN10 025-1 in. ANSI 150 1 NPS	
Maximum suction lift*		
Wet	29.0 ft	8.8 m
Dry	7.9 ft	2.4 m
Noise (dBa)		
Maximum sound power (ISO-9614-2)	86 dBa at full power and flow	
Sound pressure measured 1.6 ft (0.5 m) from equipment.		
Weight		
Models with wetted section materials coded:		
AL	62 lb	28.1 kg
SS	79 lb	35.8 kg
HT	79 lb	35.8 kg
CP, PP	61 lb	27.7 kg
PV	67 lb	30.4 kg
Notes		
* May vary based on pump materials, suction condition, discharge head, pressure, and fluid type.		
All trademarks or registered trademarks are the property of their respective owners.		

TECHNICAL SPECIFICATIONS

TECHNICAL SPECIFICATIONS FOR I80 (QTD) MODELS

Table 5-3: Technical Specifications for QUANTM® i80 (QTC) Models

	US	METRIC		
Maximum fluid working pressure	100 psi	6.89 bar, 0.69 MPa		
Maximum free-flow delivery	80 gpm	300 lpm		
Maximum size pumpable solids	0.19 in.	4.8 mm		
Fluid flow*	0.42 gal/cycle	1.59 l/cycle		
Environmental temperature range	-4° to 104°F	-20° to 40°C		
Maximum operating altitude	9842 ft	3000 m		
IP rating, ordinary locations models	IP66			
IP rating, explosive atmospheres or hazardous (classified) locations models	IP66			
Electrical ratings				
	Rated Voltage	Phase	Frequency	Current
i80 (QTD) models, FC1/FE1 motor	200–240 V	3	50/60 Hz	7.5 A
i80 (QTD) models, FC2/FE2 motor	200–240 V	1	50/60 Hz	15 A
i80 (QTD) models, FC3/FE3 motor	200–240 V	3	50/60 Hz	7.5 A
i80 (QTD) models, FC4/FE4 motor	200–240 V	1	50/60 Hz	15 A
i80 (QTC) models, FC7/FE7 motor	380–480 V	3	50/60 Hz	5.3 A
i80 (QTC) models, FC8/FE8 motor	380–480 V	3	50/60 Hz	5.3 A
i80 (QTC) models, FC9/FE9 motor	380–480 V	3	50/60 Hz	5.3 A
i80 (QTC) models, FCA/FEA motor	380–480 V	3	50/60 Hz	5.3 A
Circuit Protection				
Maximum Branch Circuit Protection Rating	20A, Inverse Time Circuit Breaker			
Short Circuit Current Rating	5 kA			
Materials of construction				
See Configuration Matrix for materials of construction for your equipment model.				
Fluid inlet/outlet sizes				
Models with wetted section materials coded:				
AL, SS	1.5 in. NPT(f) or 1.5 in. BSPT			

TECHNICAL SPECIFICATIONS

	US	METRIC
PP, PV	DIN PN10 040-1-1/2 in. ANSI 150 1-1/2 NPS	
Maximum suction lift*		
Wet	29.0 ft	8.8 m
Dry	19.3 ft	5.9 m
Noise (dBa)		
Maximum sound power (ISO-9614-2)	84 dBa at full power and full flow	
Sound power measured 1.6 ft (0.5 m) from equipment.		
Weight		
Models with wetted section materials coded:		
AL	71 lb	32.2 kg
SS	112 lb	50.8 kg
CP, PP	75 lb	34.0 kg
PV	85 lb	38.5 kg
Notes		
* May vary based on pump materials, suction condition, discharge head, pressure, and fluid type.		
All trademarks or registered trademarks are the property of their respective owners.		

TECHNICAL SPECIFICATIONS

TECHNICAL SPECIFICATIONS FOR I120 (QTE) BALL MODELS

Table 5-4: Technical Specifications for QUANTM® i120 (QTE) Ball Models

	US	METRIC		
Maximum fluid working pressure	60 psi	4.1 bar, 0.41 MPa		
Maximum free-flow delivery	120 gpm	454 lpm		
Maximum size pumpable solids	0.25 in.	6.35 mm		
Fluid flow*	0.56 gal/cycle	2.12 l/cycle		
Environmental temperature range	−4° to 104°F	−20° to 40°C		
Maximum operating altitude	9842 ft	3000 m		
IP rating, Ordinary Locations models	IP66			
IP rating, Explosive Atmospheres or Hazardous (Classified) Locations models	IP66			
Electrical ratings				
	Rated Voltage	Phase	Frequency	Current
i120 (QTE) models, FC1 motor	200–240 V	3	50/60 Hz	7.5 A
i120 (QTE) models, FC2 motor	200–240 V	1	50/60 Hz	15 A
i120 (QTE) models, FC3 motor	200–240 V	3	50/60 Hz	7.5 A
i120 (QTE) models, FC4 motor	200–240 V	1	50/60 Hz	15 A
i120 (QTC) models, FC7/FE7 motor	380–480 V	3	50/60 Hz	5.3 A
i120 (QTC) models, FC8/FE8 motor	380–480 V	3	50/60 Hz	5.3 A
i120 (QTC) models, FC9/FE9 motor	380–480 V	3	50/60 Hz	5.3 A
i120 (QTC) models, FCA/FEA motor	380–480 V	3	50/60 Hz	5.3 A
Circuit Protection				
Maximum Branch Circuit Protection Rating	20A, Inverse Time Circuit Breaker			
Short Circuit Current Rating	5 kA			
Materials of construction				
See Configuration Matrix for materials of construction for your equipment model.				
Fluid inlet/outlet sizes				
Inlet/Outlet size for models with wetted section materials coded:				

TECHNICAL SPECIFICATIONS

	US	METRIC
AL, CI, SS	2 in. NPT(f) or 2 in. BSPT	
CP, PP, PV, SS with S51 connection	DIN PN16 050–2 in. ANSI 150 2 NPS JIS 10K 50	
Maximum suction lift*		
Wet	29.0 ft	8.8 m
Dry	15.9 ft	4.8 m
Noise (dBA)		
Maximum sound power (ISO-9614-2)	89 dBA at full power and full flow	
Sound power measured 1.6 ft (0.5 m) from equipment.		
Weight		
Models with wetted section materials coded:		
AL	99 lb	44.9 kg
CI	165 lb	74.8 kg
SS	162 lb	73.5 kg
CP, PP	100 lb	45.4 kg
PV	117 lb	53.0 kg
Notes		
* May vary based on pump materials, suction condition, discharge head, pressure, and fluid type.		
All trademarks or registered trademarks are the property of their respective owners.		

TECHNICAL SPECIFICATIONS

TECHNICAL SPECIFICATIONS FOR I120 (QTE) FLAPPER MODELS

Table 5-5: Technical Specifications for QUANTM® i120 (QTE) Flapper Models

	US	METRIC		
Maximum fluid working pressure	60 psi	4.1 bar, 0.41 MPa		
Maximum free-flow delivery	120 gpm	454 lpm		
Maximum size pumpable solids	1.8 in.	46 mm		
Fluid flow*	0.5 gal/cycle	1.9 l/cycle		
Environmental temperature range	-4° to 104°F	-20° to 40°C		
Maximum operating altitude	9842 ft	3000 m		
IP rating, Ordinary Locations models	IP66			
IP rating, Explosive Atmospheres or Hazardous (Classified) Locations models	IP66			
Electrical ratings				
	Rated Voltage	Phase	Frequency	Current
i120 (QTE) models, FC1/FE1 motor	200–240 V	3	50/60 Hz	7.5 A
i120 (QTE) models, FC2/FE2 motor	200–240 V	1	50/60 Hz	15 A
i120 (QTE) models, FC3/FE3 motor	200–240 V	3	50/60 Hz	7.5 A
i120 (QTE) models, FC4/FE4 motor	200–240 V	1	50/60 Hz	15 A
i120 (QTC) models, FC7/FE7 motor	380–480 V	3	50/60 Hz	5.3 A
i120 (QTC) models, FC8/FE8 motor	380–480 V	3	50/60 Hz	5.3 A
i120 (QTC) models, FC9/FE9 motor	380–480 V	3	50/60 Hz	5.3 A
i120 (QTC) models, FCA/FEA motor	380–480 V	3	50/60 Hz	5.3 A
Circuit Protection				
Maximum Branch Circuit Protection Rating	20A, Inverse Time Circuit Breaker			
Short Circuit Current Rating	5 kA			
Materials of construction				
See Configuration Matrix for materials of construction for your equipment model.				
Fluid inlet/outlet sizes				
Inlet/Outlet size for models with wetted section materials coded:				

TECHNICAL SPECIFICATIONS

	US	METRIC
AL	2 in. NPT(f) or 2 in. BSPT	
Maximum suction lift*		
Wet	29.0 ft	8.8 m
Dry	15.9 ft	4.8 m
Noise (dBa)		
Maximum sound power (ISO-9614-2)	89 dBa at full power and full flow	
Sound power measured 1.6 ft (0.5 m) from equipment.		
Weight		
Models with wetted section materials coded:		
AL	117 lb	53.1 kg
Notes		
* May vary based on pump materials, suction condition, discharge head, pressure, and fluid type.		
All trademarks or registered trademarks are the property of their respective owners.		

CONFIGURATION MATRIX

Record the model part number and configuration sequence to help you to order replacement parts.

Model Part Number:

Configuration Sequence:

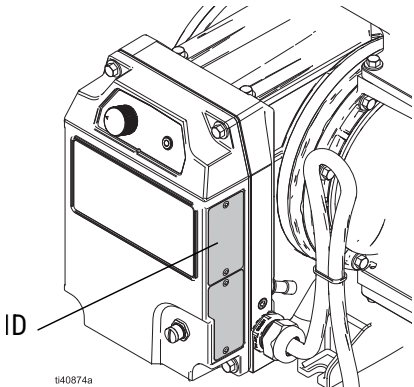


Figure 6-1: Identification Plate Location

For example, the configuration sequence QTC-ACFC2ACACBNBNA100 specifies this configuration:

- **Q:** QUANTM® Brand
- **T:** Industrial Application
- **C:** 1 in. Port
- **AC:** Acetal Wetted Section Material
- **FC2:** Drive Model
- **AC:** Acetal Seat Material
- **AC:** Acetal Check Material
- **BN:** Buna-N Diaphragm Material
- **BN:** Buna-N Manifold Seal Material
- **A1:** Aluminum Standard Ports, NPT Connection
- **00:** Standard Option

NOTE:

Some combinations are not possible. Check with your local distributor.

CONFIGURATION MATRIX

BRAND		APPLICATION		MODEL		WETTED SECTION MATERIAL	
Q	QUANTM	T	Industrial (i)	C	30 (1 in. port)	AL	Aluminum
				D	80 (1-1/2 in. port)	CI	Cast Iron
				E	120 (2 in. port)	CP	Conductive Polypropylene
						PP	Polypropylene
						PV	PVDF
						SS	316 Stainless Steel

CONFIGURATION MATRIX

Table 6-1: QUANTM® Motor Industrial Models

DRIVE		COAT	INPUT VOLTAGE	PHASE	LOCATION	CORD/CABLE TERMINATION
FC1*	Aluminum Direct Drive	Black powder coat	200–240 V	3	Ordinary	Cord with plug
FC2	Aluminum Direct Drive	Black powder coat	200–240 V	1	Ordinary	Cord with plug
FC3*	Aluminum Direct Drive	Black powder coat	200–240 V	3	Hazardous (Classified)	Cable with flying leads
FC4	Aluminum Direct Drive	Black powder coat	200–240 V	1	Explosive Atmospheres	Cable with flying leads
FC5	Aluminum Direct Drive	Black powder coat	100–120 V	1	Ordinary	Cord with plug
FC6	Aluminum Direct Drive	Black powder coat	100–120 V	1	Hazardous (Classified)	Cable with flying leads
FC7	Aluminum Direct Drive	Black powder coat	380–480 V	3	Ordinary (NA)†	Cable with flying leads
FC8	Aluminum Direct Drive	Black powder coat	380–480 V	3	Ordinary (WW)††	Cable with flying leads
FC9	Aluminum Direct Drive	Black powder coat	380–480 V	3	Hazardous (Classified) (NA)†	Cable with flying leads
FCA	Aluminum Direct Drive	Black powder coat	380–480 V	3	Explosive Atmospheres (WW)††	Cable with flying leads
FE1*	Aluminum Direct Drive	FEP**	200–240 V	3	Ordinary, Enhanced (Chemical)	Cord with plug
FE2	Aluminum Direct Drive	FEP**	200–240 V	1	Ordinary, Enhanced (Chemical)	Cord with plug
FE3*	Aluminum Direct Drive	FEP**	200–240 V	3	Hazardous (Classified), Enhanced (Chemical)	Cable with flying leads
FE4	Aluminum Direct Drive	FEP**	200–240 V	1	Explosive Atmospheres, Enhanced (Chemical)	Cable with flying leads

CONFIGURATION MATRIX

DRIVE		COAT	INPUT VOLTAGE	PHASE	LOCATION	CORD/CABLE TERMINATION
FE5	Aluminum Direct Drive	FEP**	100–120 V	1	Ordinary, Enhanced (Chemical)	Cord with plug
FE6	Aluminum Direct Drive	FEP**	100–120 V	1	Hazardous (Classified), Enhanced (Chemical)	Cable with flying leads
FE7	Aluminum Direct Drive	FEP**	380–480 V	3	Ordinary (NA)†, Enhanced (Chemical)	Cable with flying leads
FE8	Aluminum Direct Drive	FEP**	380–480 V	3	Ordinary (WW)††, Enhanced (Chemical)	Cable with flying leads
FE9	Aluminum Direct Drive	FEP**	380–480 V	3	Hazardous (Classified) (NA)†, Enhanced (Chemical)	Cable with flying leads
FEA	Aluminum Direct Drive	FEP**	380–480 V	3	Explosive Atmospheres (WW)††, Enhanced (Chemical)	Cable with flying leads
Notes: * Not available with i30 (QTC) ** Fluorinated Ethylene Propylene † North America †† Worldwide						

CONFIGURATION MATRIX

Table 6-2: QUANTM Industrial Pump Wetted Parts Materials

SEAT MATERIAL		CHECK MATERIAL		DIAPHRAGM MATERIAL		MANIFOLD SEAL MATERIAL	
AC	Acetal	AC	Acetal, ball	BN	Buna-N	--	None
AL	Aluminum	-B	Buna-N Overmold 303 Stainless Steel, flapper	CO	Polychloroprene Overmold	BN	Buna-N
BN*	Buna-N	BN	Buna-N, ball	CR	Polychloroprene	PT	PTFE
FB	303 Stainless Steel with Buna-N seals	CR	Polychloroprene, standard, ball	FK	Fluoroelastomer		
FK*	Fluoroelastomer	CW	Polychloroprene, weighted, ball	GE	Graco Engineered Thermoplastic		
GE	Graco Engineered Thermoplastic	FK	Fluoroelastomer, ball	PO	PTFE/EPDM Overmold		
PP	Polypropylene	GE	Graco Engineered Thermoplastic, ball	PS	PTFE/Santoprene, two-piece		
PV	PVDF	PT	PTFE	SP	Santoprene		
SA	17-4PH Stainless Steel with PTFE o- rings	SD	440C Stainless Steel, ball	TP	TPE		
SP	Santoprene	SP	Santoprene, ball				
SS	316 Stainless Steel	TP	TPE, ball				
TP*	TPE						
Note: * Models with BN, FK, or TP seats do not use manifold seals.							

CONFIGURATION MATRIX

Table 6-3: QUANTM Industrial Pump Connection Options

CONNECTION		OPTIONS	
A1	Aluminum, standard ports, NPT	00	Standard
A2	Aluminum, standard ports, BSPT	LP	Large particle
C1	Conductive Polypropylene, center flange		
C2	Conductive Polypropylene, end flange		
F1	PVDF, center flange		
F2	PVDF, end flange		
I1	Iron, standard ports, NPT		
I2	Iron, standard ports, BSP		
P1	Polypropylene, center flange		
P2	Polypropylene, end flange		
S1	Stainless Steel, standard ports, NPT		
S2	Stainless Steel, standard ports, BSPT		
S51	Stainless Steel, center flange, horizontal outlet		

CONFIGURATION MATRIX

Table 6-4: QUANTM® Motor Drive Selection, Industrial Models

MODEL	ORDINARY LOCATION (NEMA PLUG)	HAZARDOUS LOCATION (FLYING LEADS)	INPUT VOLTAGE	PHASE
North America				
i30 (QTC)	FC5	FC6	100–120 V	1
i80 (QTD)	FC1	FC3	200–240 V	3
i120 (QTE)	FC1	FC3	200–240 V	3
All	FC7 (Flying leads)	FC9	380–480 V	3
International				
i30 (QTC)	FC2	FC4	200–240 V	1
i80 (QTD)	FC2	FC4	200–240 V	1
i120 (QTE)	FC2	FC4	200–240 V	1
All	FC8 (Flying leads)	FCA	380–480 V	3
Enhanced (Chemical) - North America				
i30 (QTC)	FE5	FE6	100–120 V	1
i80 (QTD)	FE1	FE3	200–240 V	3
i120 (QTE)	FE1	FE3	200–240 V	3
All	FE7 (Flying leads)	FE9	380–480 V	3
Enhanced (Chemical) - International				
i30 (QTC)	FE2	FE4	200–240 V	1
i80 (QTD)	FE2	FE4	200–240 V	1
i120 (QTE)	FE2	FE4	200–240 V	1
All	FE8 (Flying leads)	FEA	380–480 V	3

MOTOR MODULE SERIES IDENTIFICATION

The motor module series is identified in the serial number on the lower product tag on the side of the motor module. The series is identified by a letter in the fourth position from the left in the serial number.


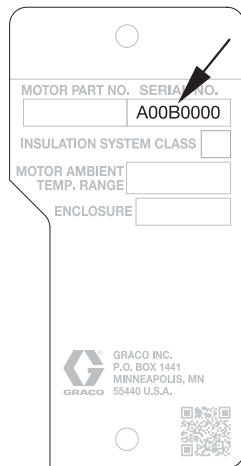


Figure 7-1: Motor Module Serial Number Location


COMPONENT IDENTIFICATION

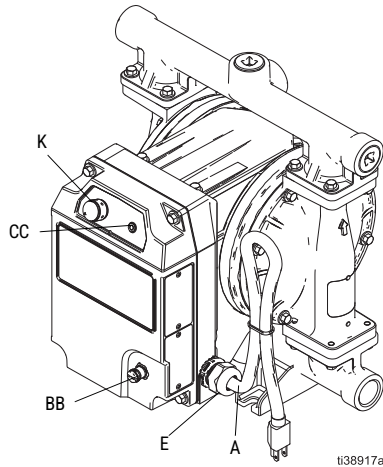

i30 (QTC) model shown

Ordinary Locations models include a cord with a plug and Input/Output (I/O) port.

Figure 8-1: Ordinary Locations Model Components

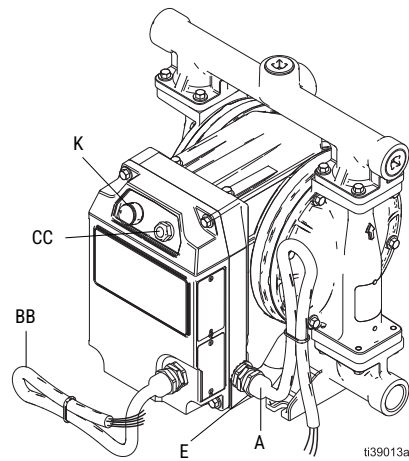

i30 (QTC) model shown

Explosive Atmospheres or Hazardous (Classified) Locations models include flying leads on the power cable (for direct wiring to a power source).

Figure 8-2: Explosive Atmospheres or Hazardous (Classified) Locations Model Components

REF.	COMPONENT	ORDINARY LOCATIONS MODELS	EXPLOSIVE ATMOSPHERES OR HAZARDOUS (CLASSIFIED) LOCATIONS MODELS
A	Power Cord/Cable	15 ft (4.6 m) cord with plug*	15 ft (4.6 m) cable for hard-wiring†
BB	I/O Port/Cable - On/Off Control, Digital Input - Run Status, Digital Output - Speed and Pressure Control, Analog Input	M12, 5-pin connector**	Cable (not supplied) for direct wiring to user-provided controls‡
CC	LED Indicator◆	Standard	Reinforced
E	External Ground Fastener, Ground Symbol	The equipment is marked per IEC 417, Symbol 5019: 	
K	Control Knob	Turn clockwise (right) to increase fluid output	
Notes: * See Required Power and Plugs . ** See I/O Pin Connection . † See Wiring Power Cables . ‡ I/O cable kits are available (purchase separately). See your related motor manual. See Related Manuals . ◆ See LED Indicator .			


TYPICAL INSTALLATION

Typical installations are shown for ball and flapper model pumps in ordinary and hazardous locations. The figures are only guides for selecting and installing system components.

Contact your local distributor for assistance in planning a system to suit your needs. Always use Genuine Graco Parts and accessories. Be sure all accessories are adequately sized and pressure-rated to meet the requirements of the system.

Reference letters in the text, such as (A), refer to the callouts in the figures.

TYPICAL INSTALLATION FOR BALL MODELS IN ORDINARY LOCATIONS

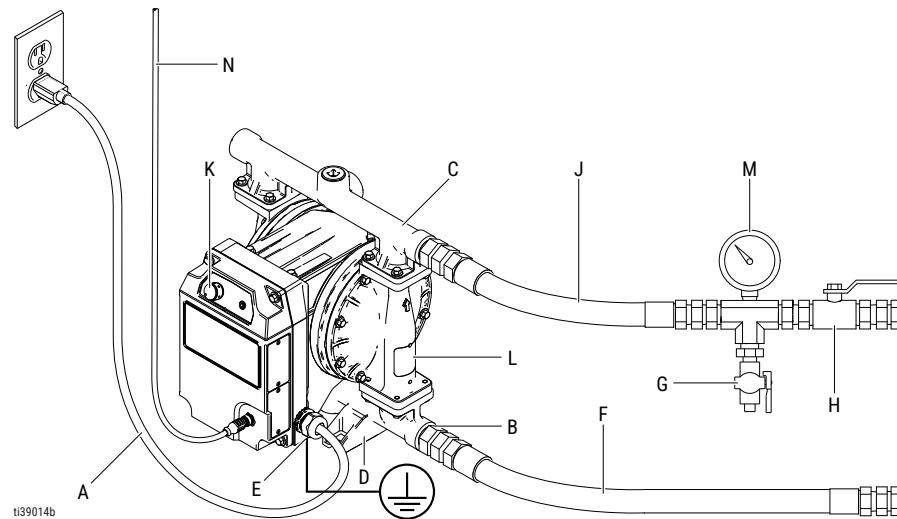

i30 (QTC) model shown

Figure 9-1: Typical Installation for Models in Ordinary Locations (Cord and Plug Connection)

PUMP COMPONENTS

- A*** Power cord
- B** Fluid inlet port
- C** Fluid outlet port
- D** Mounting feet
- E** Ground fastener
- K** Fluid output control knob
- L** Diaphragm access ports (not shown)†

Notes:

* Connect to a circuit with a main electrical disconnect. Install a branch circuit protective device in each ungrounded phase. Follow local codes and regulations.

† See **Install Fluid Leak Line Accessories**.

ACCESSORIES (NOT SUPPLIED)


- F*** Conductive, flexible fluid supply line
- G*** Fluid drain valve
- H** Fluid shutoff valve
- J*** Conductive, flexible fluid outlet line
- M** Fluid pressure gauge
- N** I/O Cable

Note:

* Required but not supplied.

TYPICAL INSTALLATION

TYPICAL INSTALLATION FOR BALL MODELS IN EXPLOSIVE ATMOSPHERES OR HAZARDOUS (CLASSIFIED) LOCATIONS

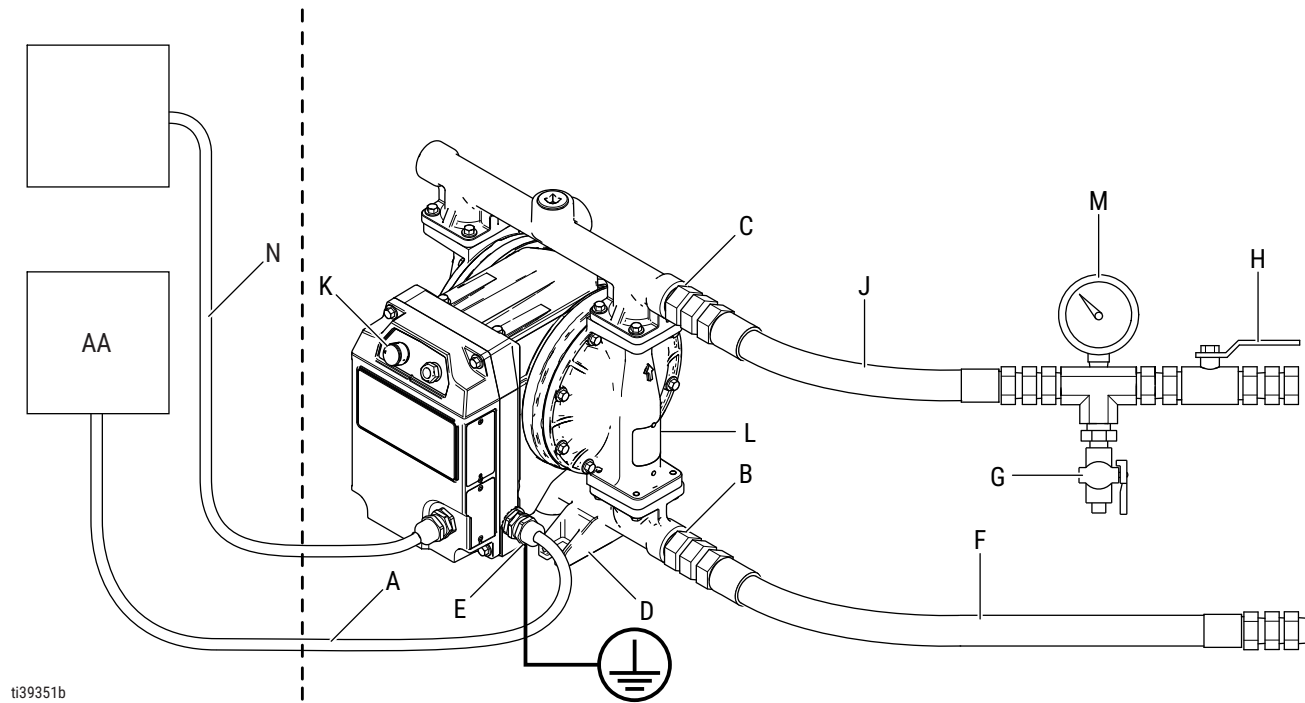

i30 (QTC) model shown

Left: Ordinary Location

Right: Explosive Atmosphere or Hazardous (Classified) Location

Figure 9-2: Typical Installation for Models in Explosive Atmospheres or Hazardous (Classified) Locations (Hard Wired for Permanent Connection)

PUMP COMPONENTS

- A*** Power cable
- B** Fluid inlet port
- C** Fluid outlet port
- D** Mounting feet
- E** Ground fastener
- K** Fluid output control knob
- L** Diaphragm access ports (not shown)†.
Diaphragm access ports must not be open in hazardous locations. Ports must have installed either plugs (as shipped from the factory) or leak sensor kit. See leak sensor manual. See **Related Manuals**.

Notes:

* Connect to a circuit with a main electrical disconnect. Install a branch circuit protective device in each ungrounded phase. Follow local codes and regulations.

† See **Install Fluid Leak Line Accessories**.

ACCESSORIES (NOT SUPPLIED)

- F*** Conductive, flexible fluid supply line
- G*** Fluid drain valve
- H** Fluid shutoff valve
- J*** Conductive, flexible fluid outlet line
- M** Fluid pressure gauge
- N*** I/O Cable‡
- AA** Electrical disconnect


Notes:

* Required but not supplied.

‡ I/O cable kits are available (purchase separately). See your related motor manual. See **Related Manuals**.

TYPICAL INSTALLATION

TYPICAL INSTALLATION FOR i120 (QTE) FLAPPER MODELS IN ORDINARY LOCATIONS

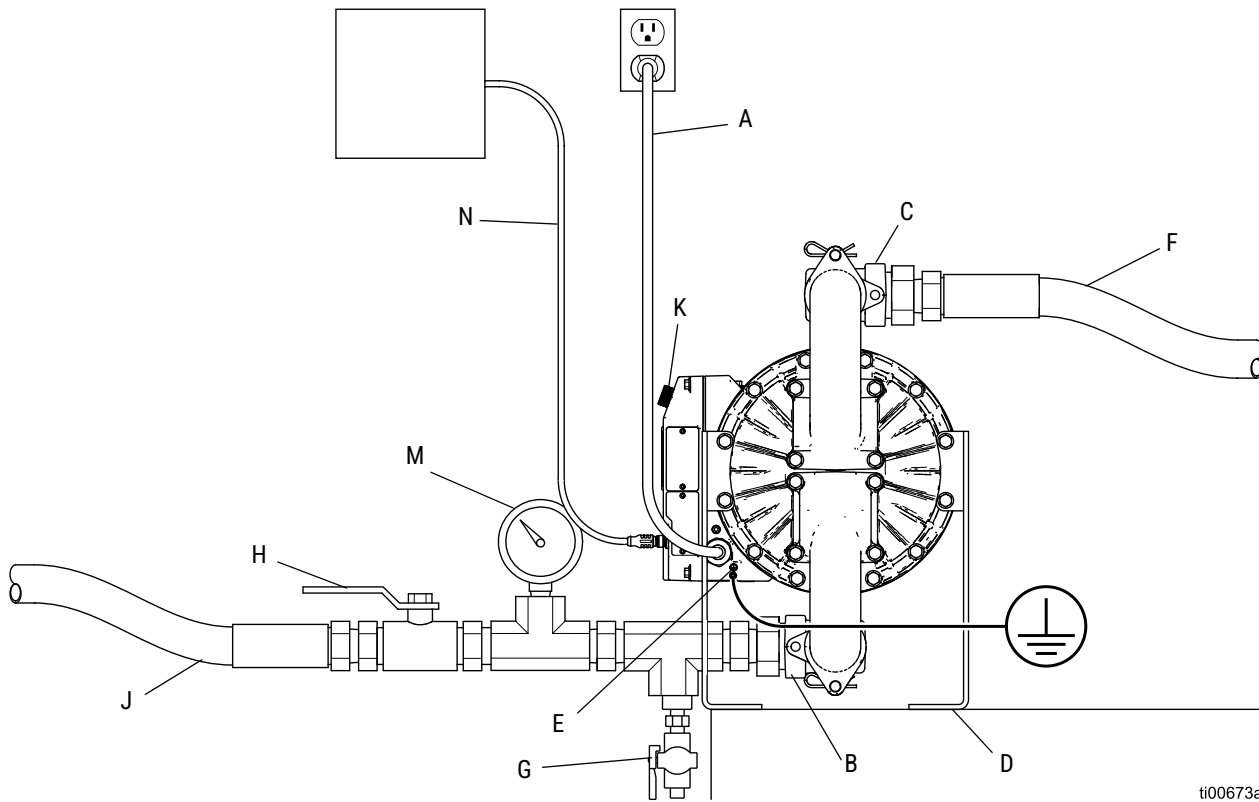

ti00673a

Figure 9-3: Typical Installation for i120 (QTE) Flapper Models in Ordinary Locations (Cord and Plug Connection)

PUMP COMPONENTS

- A*** Power cord
- B** Fluid outlet port
- C** Fluid inlet port
- D** Mounting feet
- E** Ground fastener
- K** Fluid output control knob
- L** Diaphragm access ports (not shown)†

Notes:

* Connect to a circuit with a main electrical disconnect. Install a branch circuit protective device in each ungrounded phase. Follow local codes and regulations.

† See **Install Fluid Leak Line Accessories**.

ACCESSORIES (NOT SUPPLIED)


- F*** Conductive, flexible fluid supply line
- G*** Fluid drain valve
- H** Fluid shutoff valve
- J*** Conductive, flexible fluid outlet line
- M** Fluid pressure gauge
- N** I/O Cable

Note:

* Required but not supplied.

TYPICAL INSTALLATION

TYPICAL INSTALLATION FOR i120 (QTE) FLAPPER MODELS IN HAZARDOUS (CLASSIFIED) LOCATIONS

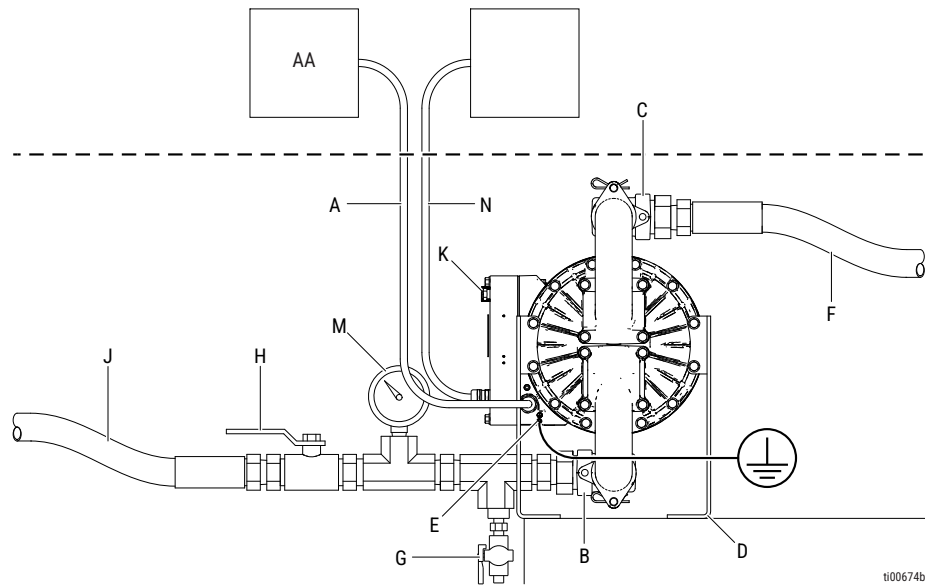

Top: Ordinary Location

Bottom: Explosive Atmosphere or Hazardous (Classified) Location

Figure 9-4: Typical Installation for i120 (QTE) Flapper Models in Explosive Atmospheres or Hazardous (Classified) Locations (Hard Wired for Permanent Connection)

PUMP COMPONENTS

- A*** Power cable
- B** Fluid outlet port
- C** Fluid inlet port
- D** Mounting feet
- E** Ground fastener
- K** Fluid output control knob
- L** Diaphragm access ports (not shown).† Ports must not be open in hazardous locations. Ports must have installed either plugs (as shipped from the factory) or leak sensor kit. See leak sensor manual. **Related Manuals.**

Notes:

* Connect to a circuit with a main electrical disconnect. Install a branch circuit protective device in each ungrounded phase. Follow local codes and regulations.

† See **Install Fluid Leak Line Accessories.**

ACCESSORIES (NOT SUPPLIED)

- F*** Conductive, flexible fluid supply line
- G*** Fluid drain valve
- H** Fluid shutoff valve
- J*** Conductive, flexible fluid outlet line
- M** Fluid pressure gauge
- N*** I/O Cable†
- AA** Electrical disconnect

Notes:

* Required but not supplied.

† I/O cable kits are available (purchase separately). See your related motor manual. See **Related Manuals.**

INSTALLATION

Follow these procedures to install the pump.

⚠ WARNING			
			
Installation of this equipment involves potentially hazardous procedures. Only trained and qualified personnel who have read and who understand the information in this manual should install this equipment.			

MOUNT THE PUMP

⚠ WARNING
The pump may be very heavy (see Technical Specifications for specific weights). Use at least two straps to evenly support the bottom of the pump, and appropriate lifting equipment, or have two people lift the pump. Do not use the upper manifold or port (C) alone to lift the pump.
Mount the pump to the mounting surface using fasteners through each hole of the feet.

1. Ensure that the mounting surface is level.
2. Ensure that the mounting surface and mounting hardware is strong enough to support the weight of the pump, fluid lines, accessories, and fluid, as well as the stress caused during operation.

3. For all mountings, be sure the pump is secured with fasteners through the mounting holes on the base. See **Dimensions**.

NOTE:

For ease of operation and service, mount the pump so the control knob (K), LED indicator (CC), I/O port/cable (BB), and fluid inlet and outlet ports (B, C) are easily accessible. See **Component Identification**.

NOTICE

To avoid pump damage, mount the pump to the mounting surface using fasteners through each hole of the feet.

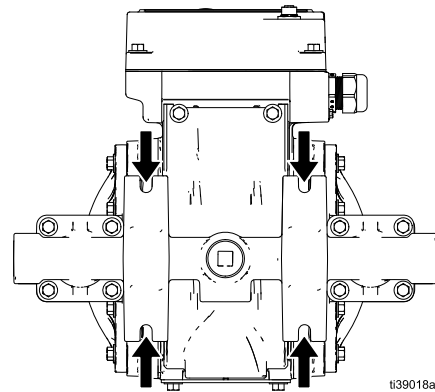


Figure 10-1: Mounting Holes

ORIENTATION OF FLUID INLET AND OUTLET PORTS

The fluid port of the center manifold can be rotated to either a vertical or horizontal position.

To change the fluid port orientation of the center manifold (54):

1. Remove the clevis and cotter pins (35, 36).
2. Rotate the center manifold (54) to the applicable vertical or horizontal position.
3. Install the clevis and cotter pins (35, 36).

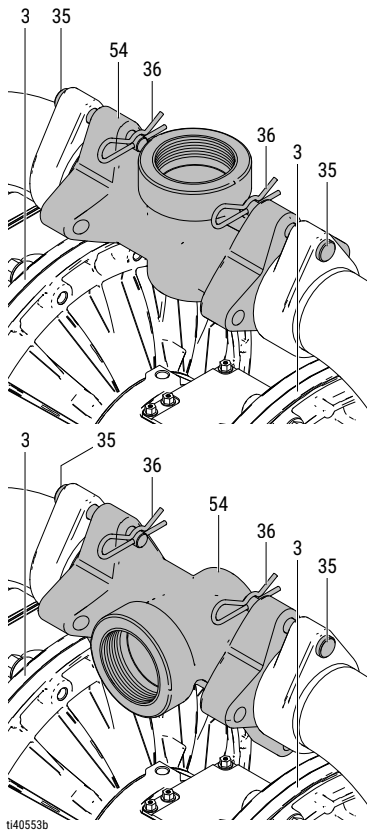


Figure 10-2: Fluid Inlet and Outlet Port Orientation

KEY

- 3 Fluid covers
- 54 Center manifold
- 35 Clevis pin
- 36 Cotter pin

CONNECT FLUID LINES

Use conductive, flexible fluid lines for fluid supply and fluid outlet lines.

NOTE:

For proper priming, ensure the fluid outlet port is mounted higher than the fluid inlet port. See **Typical Installation**.

1. Install conductive, flexible fluid lines.
2. Install a fluid drain valve near the fluid outlet. See **Typical Installation**.

⚠ WARNING				
A fluid drain valve is required to relieve pressure in the fluid outlet line. The drain valve reduces the risk of serious injury, including splashing in the eyes or on the skin, when relieving pressure.				

3. Install a fluid shutoff valve in the fluid outlet line downstream from the fluid drain valve.

NOTE:

Install the equipment as close as possible to the material source. See **Technical Specifications** for maximum suction lift.

NOTICE
The pump can be damaged if flexible fluid lines are not used. If hard-plumbed fluid lines are used in the system, use a short length of conductive, flexible fluid line to connect to the pump.

INSTALL LEAK SENSOR HOSES AND FITTINGS

The leak sensor monitors for leaks in the pump due to diaphragm rupture or other leaks in the equipment. If the sensor detects a leak, the LED indicator on the pump will flash and the pump will stop.

The leak sensor is installed in certain models at the factory or by the distributor. A leak sensor kit is available for initial installation or replacement. See your motor manual for accessory kits. See **Related Manuals**.

For models with a factory-installed leak sensor, you must install the external hoses and fittings before using the pump for the first time. See your leak sensor manual for instructions.

NOTICE

To avoid pump damage, install a leak sensor to detect leaks in the equipment due to diaphragm rupture.

INSTALL FLUID LINE ACCESSORIES

Install the fluid line accessories in the following order. The find letters (G, H, M, etc.) correspond to the figures in **Typical Installation**. Use adapters as needed.

- **Fluid drain valve (G):** Required. Relieves fluid pressure in the system.
- **Fluid shutoff valve (H):** Shuts off fluid flow.
- **Fluid pressure gauge (M):** For more precise adjustment of the fluid pressure.
- **Fluid outlet line (J):** Required. To dispense fluid.
- **Fluid supply line (F):** Required. Enables the equipment to draw fluid from a container.

INSTALL FLUID LEAK LINE ACCESSORIES

WARNING



If a leak sensor is not installed in the pump and the diaphragm ruptures, the equipment will fill with fluid or fluid will drain into the work area. To avoid injury from leaking fluid, toxic fluid, toxic fumes, splashing fluid, or hot fluid, install fluid leak lines to route fluid leaks due to diaphragm rupture.

NOTICE

To avoid pump damage due to diaphragm rupture, install a leak sensor to detect leaks in the equipment and automatically stop pump operation. See **Install Leak Sensor Hoses and Fittings**.

The fluid leak line (L2) routes fluid to a drain location if fluid leaks due to diaphragm rupture.


1. Remove the plugs (if applicable) in the diaphragm access ports (L).
2. Install conductive, flexible fluid leak lines (L2) to the diaphragm access ports (L). Use adapters as needed.
3. Route the fluid leak lines (L2) to a grounded end container (L3) to catch leaking fluid. Follow local codes and regulations for grounding.

WARNING



For Models in Explosive Atmospheres or Hazardous (Classified) Locations) without a leak sensor: To avoid injury from hazardous fluids, ensure that the end container is grounded and located in a non-explosive or non-hazardous environment. Diaphragm access ports must not be open in hazardous locations. Ports must have installed either plugs (as shipped from the factory) or leak sensor kit. See leak sensor manual. See **Related Manuals**. Ensure that all leak sensor tubes and fittings are installed securely.

INSTALLATION

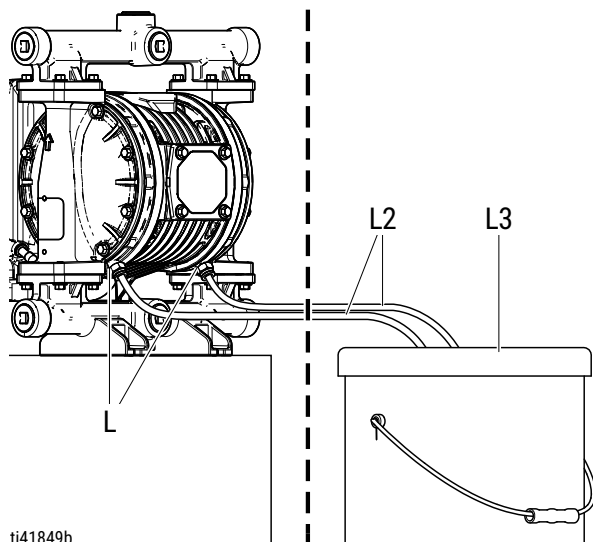

ti41849b

Figure 10-3: Typical Installation of Fluid Leak Lines (Ordinary Locations)

GROUNDING

⚠ WARNING				
				
The equipment must be grounded to reduce the risk of static sparking and electric shock. Electric or static sparking can cause fumes to ignite or explode. Improper grounding can cause electric shock. Grounding provides an escape wire for the electric current. • Always ground the entire fluid system as described in this section. • Follow local codes and regulations.				

GROUND THE PUMP

Before operating the equipment, ground the system as follows.


CONNECT A STATIC GROUND

1. Loosen the ground fastener.
2. Insert one end of a 12-gauge or thicker ground wire behind the ground fastener and securely tighten the ground fastener.

3. Connect the clamp end of the ground wire to a true earth ground.

NOTE:

A ground wire and clamp are available (purchase separately). See your Parts manual. See **Related Manuals**.

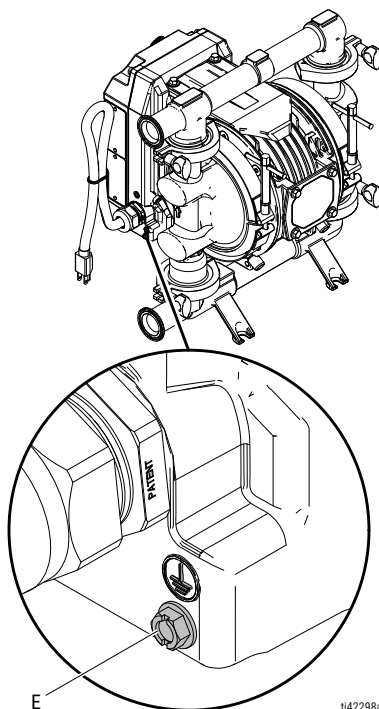

ti42298a

Figure 10-4: Equipment Ground Fastener

CONNECT THE ELECTRICAL GROUND

For Models in Explosive Atmospheres or Hazardous (Classified) Locations: Connect the ground wire of the power cable to a true earth ground. See **Electrical Connections and Wiring**.

For Models in Ordinary Locations: Connect the power cord plug to a power outlet that is grounded to a true earth ground.

GROUND THE FLUID LINES

Use only conductive fluid lines with a maximum of 500 ft (150 m) combined line length to ensure grounding continuity. Check electrical resistance of the fluid lines.

GROUND THE FLUID SUPPLY CONTAINER

Follow local codes and regulations.

GROUND THE PAILS FOR SOLVENTS AND SANITIZING SOLUTION USED FOR FLUSHING

Follow local codes and regulations. Use only conductive metal pails, placed on a grounded surface. Do not place the pail on a non-conductive surface, such as paper or cardboard, which interrupts grounding continuity.

VERIFY GROUND CONTINUITY

Check the pump ground continuity after the initial installation. Set a regular schedule for checking ground continuity to maintain proper grounding. Do not exceed 1 ohm resistance from earth ground to the pump.

ELECTRICAL CONNECTIONS AND WIRING

The power and connectivity requirements for the equipment depend on equipment configuration, power supply, and operating location.

REQUIRED POWER AND PLUGS

 WARNING  WARNING				
 WARNING  WARNING  WARNING				

WARNING

SEVERE ELECTRIC SHOCK HAZARD

This equipment can be powered by more than 240 V. Contact with this voltage will cause death or serious injury.

- Turn off and disconnect power before servicing or repairing equipment.
- All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.

NOTE:




For equipment provided with a cable and flying leads (no plug), install a main electrical disconnect per local codes and regulations.

NOTE:

Use adapters as needed. Follow local codes and regulations.

ELECTRICAL CONNECTIONS AND WIRING

  Table 11-1: Required Power and Plugs

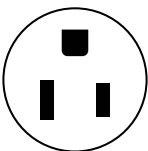LOCATION	MOTOR CONFIGURATION CODE*	MODEL	POWER REQUIREMENTS				CORD/CABLE TERMINATION	PLUG
			INPUT VOLTAGE	PHASE ‡	FREQUENCY	CURRENT		
Ordinary Locations	FC1/FE1	i80 (QTD), i120 (QTE)	200–240 V	3	50/60 Hz	7.5 A	NEMA L15-20 Plug	
	FC2/FE2	i30 (QTC)	200–240 V	1	50/60 Hz	10 A	IEC 60320-C14 Plug††	
		i80 (QTD), i120 (QTE)	200–240 V	1	50/60 Hz	15 A	IEC 60320-C20 Plug††	
	FC5/FE5	i30 (QTC)	100–120 V	1	50/60 Hz	12 A	NEMA 5-15 Plug	
	FC7/FE7	All	380–480 V	3	50/60 Hz	5.3 A	Flying Leads, see Wiring 3-Phase Models	For permanent connection **
	FC8/FE8	All	380–480 V	3	50/60 Hz	5.3 A	Flying Leads, see Wiring 3-Phase Models	
Hazardous (Classified) Locations	FC3/FE3	i80 (QTD), i120 (QTE)	200–240 V	3	50/60 Hz	7.5 A	Flying Leads, see Wiring 3-Phase Models	
	FC6/FE6	i30 (QTC)	100–120 V	1	50/60 Hz	12 A	Flying Leads, see Wiring Single-Phase Models	
	FC9/FE9	All	380–480 V	3	50/60 Hz	5.3 A	Flying Leads, see Wiring 3-Phase Models	
Explosive Atmospheres	FC4/FE4	i30 (QTC)	200–240 V	1	50/60 Hz	10 A	Flying Leads, see Wiring Single-Phase Models	
		i80 (QTD), i120 (QTE)	200–240 V	1	50/60 Hz	15 A		

ELECTRICAL CONNECTIONS AND WIRING

LOCATION	MOTOR CONFIGURATION CODE*	MODEL	POWER REQUIREMENTS				CORD/CABLE TERMINATION	PLUG
			INPUT VOLTAGE	PHASE ‡	FREQUENCY	CURRENT		
	FCA/FEA	All	380–480 V	3	50/60 Hz	5.3 A	Flying Leads, see Wiring 3-Phase Models	

Notes:

* See **Configuration Matrix**.

† Connect to a circuit with a main electrical disconnect. Install a branch circuit protective device in each ungrounded phase. Follow local codes and regulations.

** See **Wiring Power Cables**.

†† Adapters are available (purchase separately). See **Adapters for Plugs and Cables**.

WIRING POWER CABLES

To connect a model with flying leads to a power source, follow these requirements and instructions.

⚠ DANGER				
				
DANGER SEVERE ELECTRIC SHOCK HAZARD This equipment can be powered by more than 240 V. Contact with this voltage will cause death or serious injury. • Turn off and disconnect power before servicing or repairing equipment. • All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.				

To connect a model with flying leads to a power source, complete one of the following:

- Hard wire the equipment to a power source.

- Supply a plug and socket.

NOTE:

For Explosive Atmospheres or Hazardous (Classified) Locations models, an interlocking device must also be provided and it must meet the requirements of EN 60079-0 or UL 674.

NOTE:

See **Required Power and Plugs** for power requirements. Install a branch circuit protective device in each ungrounded phase.

A 15 ft (4.6 m) cable (either 3-conductor or 4-conductor) is provided with models with flying leads. Connect the cable directly to a panel with branch circuit protection and an electrical disconnect per local codes and regulations. If additional length of cable is required, connect additional cable through a junction box. Use the following table to select the minimum cable wire gauge based on length:

LENGTH	GAUGE (US)	AREA (METRIC)
50 ft (15.2 m)	12 AWG	3.3 mm ²
100 ft (30.4 m)	10 AWG	5.3 mm ²
200 ft (61 m)	8 AWG	13.3 mm ²

NOTE:

Ensure that the electrical disconnect (AA) is shut off and locked out before wiring.

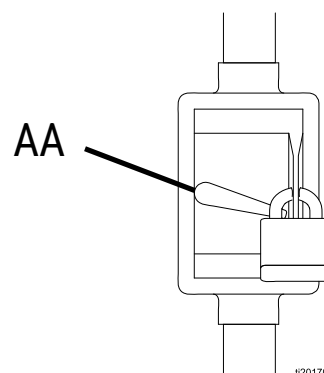


Figure 11-1: Electrical Disconnect

WIRING SINGLE-PHASE MODELS

For single-phase models with flying leads, connect the wires as follows:

Table 11-2: Single-Phase Model Wiring

MOTOR	L1	L2/ NEUTRAL	GROUND
FC6, FE6	Black	White	Green
FC4, FE4	Brown	Blue	Green with Yellow Stripe

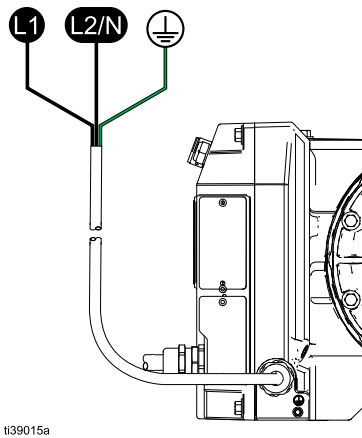


Figure 11-2: Wiring for Single-Phase Models

WIRING 3-PHASE MODELS

For 3-phase models with flying leads, connect the wires as follows:

Table 11-3: 3-Phase Model Wiring

MOTOR	L1	L2	L3	GROUND
FC3, FE3 FC7, FE7 FC9, FE9	Black	White	Red	Green
FC8, FE8 FCA, FEA	Brown	Black	Grey	Green with Yellow Stripe

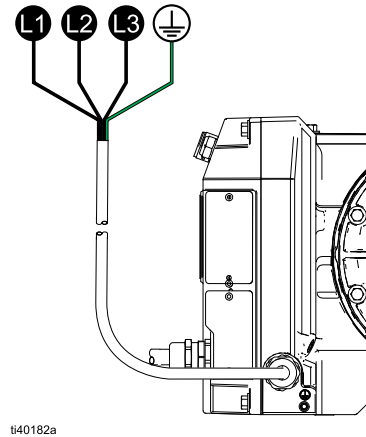


Figure 11-3: Wiring for 3-Phase Models

REQUIREMENTS FOR CABLES AND CONDUITS

There are specifications and compliance requirements for selecting cables and conduits for models in Explosive Atmospheres or Hazardous (Classified) Locations only.

 DANGER				
				
DANGER SEVERE ELECTRIC SHOCK HAZARD This equipment can be powered by more than 240 V. Contact with this voltage will cause death or serious injury. • Turn off and disconnect power before servicing or repairing equipment. • All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations. Do not modify or repair explosion proof joints. Modifying explosion proof joints may produce an explosion hazard.				

REQUIREMENTS FOR EXPLOSION PROOF EQUIPMENT

Use appropriate conduits, connectors, and cable glands rated for Class I, Division I, Group D. Follow all national, state, and local electrical codes and regulations.

Cable rating requirement: 158°F (70°C) minimum (all cables)

Cable gland rating requirement: 158°F (70°C) minimum (all glands)

REQUIREMENTS FOR FLAME PROOF EQUIPMENT

Use appropriate conduits, connectors, and cable glands rated for Ex II 2 G. Follow all national, state, and local electrical codes and regulations.

Cable rating requirement: 158°F (70°C) minimum (all cables)

Cable gland rating requirement: 158°F (70°C) minimum (all glands)

ADAPTERS FOR PLUGS AND CABLES

Use plug and cable adapters as needed. Follow local codes and regulations.

 DANGER				
				
DANGER SEVERE ELECTRIC SHOCK HAZARD This equipment can be powered by more than 240 V. Contact with this voltage will cause death or serious injury. • Turn off and disconnect power before servicing or repairing equipment. • All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.				

Plug and cable adapters are available (purchase separately).

Table 11-4: Plug Adapters

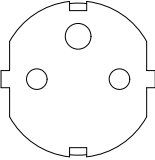
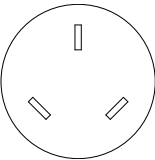
 
 
 
 
REGION	PART		PLUG ADAPTER
	C14 PLUGS	C20 PLUGS	
Europe	242001	15G958	
Australia, China	242005	17A242	
Italy	---	15G959	
Italy	287121 Kit contains all three C14 Plugs	---	
Switzerland		15G961	
Denmark		---	

Table 11-5: Plug Retainer Clips

PLUG	PART
C14 Plugs	195551
C20 Plugs	121249

Table 11-6: I/O Port Flying Lead Cable Adapters (for models in Ordinary Locations only)

CABLE LENGTH	PART
6.5 ft (2 m)	123846
50 ft (15 m)	17D160
98 ft (30 m)	17B590

I/O PIN CONNECTION

I/O pin diagrams and equivalent electrical circuits apply to models in Ordinary Locations only.

 ! DANGER				
				
DANGER SEVERE ELECTRIC SHOCK HAZARD This equipment can be powered by more than 240 V. Contact with this voltage will cause death or serious injury. • Turn off and disconnect power before servicing or repairing equipment. • All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.				

For models in Ordinary Locations only. For models in Hazardous Locations, wiring kit is required. Connection instructions for Hazardous Locations is included in the wiring kit of the related motor manual. See **Related Manuals**.


NOTE:

All I/O connectors are tolerant to 30 VDC (volts of direct current) and are reverse-polarity protected.

For wiring diagrams, see **Equivalent Electrical Circuits for I/O Pin Connection**.

Table 11-7: I/O Connector Pinout (for Models in Ordinary Locations only)








PIN	CONNECTOR TYPE	DESCRIPTION
Pin 1 (Brown)	Digital Input	Used with Pin 3. Connect a switch to turn the pump on or off. Digital input has an internal 5 VDC pull-up for dry-contact or current-sinking circuits. Digital input is internally clamped for push-pull outputs. Release or drive the input high to stop the equipment from running. Pull the input low to re-enable the equipment.
Pin 2 (White)	Digital Output (Equipment Running)	Used with Pin 3. Tells an external device if the pump is or is not running. Digital output is current-sinking with a current capacity up to 100 mA. Digital output is internally clamped for driving large inductive loads. The output is automatically pulled low when the equipment is running and automatically released when the equipment is not running.
Pin 3 (Blue)	GND/Common	Earth ground, common connection.
Pin 4 (Black)	Analog Input, 4-20mA +	Analog inputs are 4-20 mA current-controlled. When the analog input is connected and driving current, the equipment disables the control knob (K) and uses the analog input to control the speed and pressure of the equipment. The control knob (K) can still be used to shut off the equipment by turning the knob to off (0). To re-enable the equipment at the speed and pressure commanded by the analog input, turn the control knob up (clockwise). To disable the analog input control and enable the control knob (K): 1. Disconnect power to the system. 2. Disconnect the analog input (Pin 4, Pin 5). 3. Connect the unit to a power source to turn on the equipment and enable the control knob (K) on the equipment.
Pin 5 (Gray)	Analog Input, 4-20mA -	

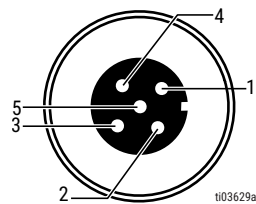

Orientation: facing the connector on the pump body.
Figure 11-4: M12, 5-pin Connector for Models in Ordinary Locations

Table 11-8: Equivalent Electrical Circuits for I/O Pin Connection (for Models in Ordinary Locations only)

I/O CIRCUIT	EQUIVALENT CIRCUIT
Digital Input	
	Logic: Low (Run) < 2 V High (Stop) > 3 V
	Compatible Drivers for Digital Input:
	Switch or Relay Open Collector (NPN) Push-Pull Driver

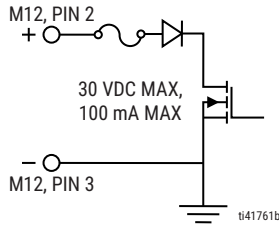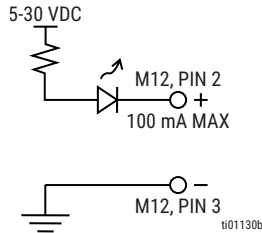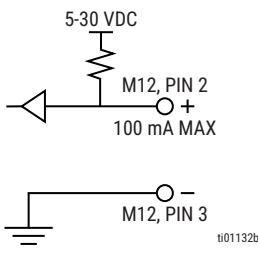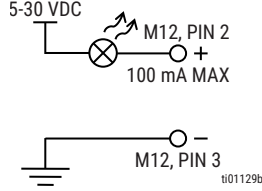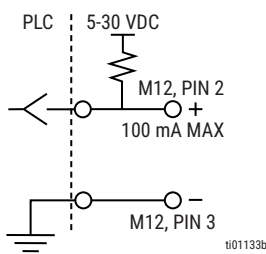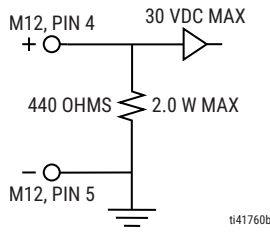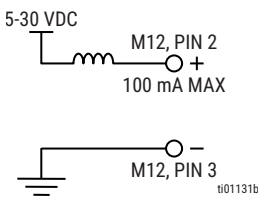I/O CIRCUIT	EQUIVALENT CIRCUIT	I/O CIRCUIT	EQUIVALENT CIRCUIT
Digital Output	 Logic: Pump Running: Active Pump Stopped: Inactive		 LED
	Compatible Digital Output Circuit Drivers:  PLC With Internal Pull-up		 Lamp
	 PLC without Internal Pull-up	Analog Input	
	 Relay or Solenoid		

OPERATION

PRESSURE RELIEF PROCEDURE



Follow the Pressure Relief Procedure whenever you see this symbol.

 WARNING				
				
This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as splashing fluid and moving parts, follow the Pressure Relief Procedure when you stop operating and before cleaning, checking, or servicing the equipment.				

1. Turn the fluid output control knob to off and disconnect power to the system.
2. Close the fluid shutoff valve.
3. Open the fluid drain valve to relieve fluid pressure. Prepare a container to catch the drainage.
4. Leave the fluid drain valve open until the system is ready to be pressurized.

BEFORE EACH USE

Prepare the equipment for initial operation by tightening fasteners and connections, and flushing the equipment.

TIGHTEN FASTENERS

Check and tighten all fasteners before using the equipment.

After the first day of operation, re-tighten the fasteners.

NOTICE

To avoid pump damage, do not over-tighten the fasteners on the equipment.

TIGHTEN CONNECTIONS

Check and tighten all fluid connections before operating the equipment. Replace worn or damaged parts as needed.

NOTICE

Firmly tighten all connections to avoid leaks and damage to equipment parts.

FLUSH THE EQUIPMENT

Flush the equipment before each use. See **Maintenance**.

The equipment was tested with water. If water could contaminate the fluid being dispensed, flush the equipment with a compatible solvent before first use.

START THE EQUIPMENT

 WARNING				
				
To prevent serious injury from splashing fluid, ensure the control knob (K) is set to off (0) before connecting the equipment to a power source.				

PREPARE THE EQUIPMENT FOR STARTUP

1. Turn the control knob to off.
2. Confirm that the equipment is properly grounded. See **Grounding**.
3. Check and tighten all fasteners and connections before operating the equipment. Replace worn or damaged parts as needed.
4. Insert the suction end of the fluid supply line into the fluid to be dispensed.
5. Insert the outlet end of the fluid outlet line into the end container.
6. Close the fluid drain valve.
7. Ensure that all fluid shutoff valves are open.
8. If the fluid outlet line has a dispensing device, hold the dispensing valve open into the end container.

START AND ADJUST THE EQUIPMENT

1. Follow **Prepare the Equipment for Startup**.
2. Connect the equipment to a power source. See **Electrical Connections and Wiring**.

NOTE:

An alert beep will sound and the pump will automatically start cycling if the pump is connected to power and the control knob is not set to off.

3. Turn the control knob on and allow the equipment to complete the startup sequence. See **LED Indicator Overview**.

The LED indicator light illuminates solid yellow while calibrating. The pump cycles slowly while adjusting and operates normally after fully calibrating.

The system stays calibrated as long as power to the system is connected. If power to the system is disconnected, the system will automatically recalibrate after power is restored.

4. Slowly increase the control knob until the equipment is operating at the set output level.
5. If flushing, run the equipment long enough to thoroughly clean the equipment and lines.

TIPS TO REDUCE CAVITATION

NOTICE

Frequent or excessive cavitation can cause serious damage, including pitting and early wear of wetted parts, and may result in reduced efficiency of the equipment. Cavitation damage and reduced efficiency both result in increased operating costs.

Cavitation is the formation and collapse of air pockets in the fluid. Cavitation depends on the vapor pressure of the fluid, the system suction pressure, and the velocity pressure. Viscous fluids are more difficult to pump and more prone to cavitation than non-viscous fluids.

To improve equipment efficiency and reduce the cavitation:

1. **Reduce vapor pressure:** Decrease the temperature of the fluid.
2. **Increase suction pressure:**
 - a. Position the equipment lower than the fluid level in the supply.
 - b. Reduce the number of fittings on the suction lines to reduce friction length.
 - c. Increase the diameter of the suction lines.
 - d. Reduce the fluid inlet pressure. An inlet pressure supply of 3–5 psi (21–35 kPa, 0.2–0.3 bar) is adequate for most materials.

NOTICE

To avoid pump damage and inefficient operation, do not use a fluid inlet pressure greater than 25 percent of the outlet working pressure.

- e. Increase the Net Positive Suction Head (NPSH). See **Performance Charts**.
3. **Reduce liquid velocity:** Slow the equipment cyclic rate.

Consider all the previously listed factors in system design. To maintain efficiency, operate the equipment at the lowest speed and pressure setting needed for the required flow.

Contact your local distributor for site-specific suggestions to improve equipment performance and reduce operating costs.

SELECT CONTROL MODE

You can select between two pump control modes. The mode determines whether the pump control knob changes the fluid flow, or the fluid flow and stall pressure.

- **Flow Control Mode** is enabled by default. In this mode, adjustment of the control knob results in change to the speed of operation and therefore fluid flow of the pump. The stall pressure is always the maximum operation pressure of the pump.
- In **Pressure Control Mode**, adjustment of the control knob results in changes to both fluid flow and stall pressure of the pump.

To select the Control Mode:

1. Follow **Remove the Control Cover**, in the control cover repair procedures in the motor repair/parts manual. See **Related Manuals**.
2. Verify that the equipment is turned off and power to the system is disconnected before performing any service or repair procedure.
3. Locate the control mode switch (1-CM).
4. Select the control mode:
 - a. For Pressure Control Mode, push the switch 1-CM to the left position.
 - b. For Flow Control Mode, push the switch 1-CM to the right position.
5. Follow **Install the Control Cover** in the control cover repair procedures in the motor repair/parts manual.

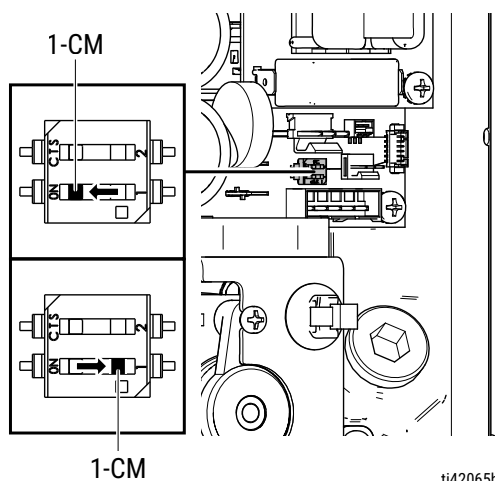


Figure 12-1: Control Mode Switch

DISABLE AUTO-PRIME

The auto-prime sensor detects fluid while the equipment is operating. The equipment will run as long as fluid is detected. If fluid is not detected, the auto-prime sequence will restart.

Auto-prime is enabled by default. To disable auto-prime:

1. Follow **Remove the Control Cover**, in the control cover repair procedures in the motor manual. See **Related Manuals**.
2. Verify that the equipment is turned off and power to the system is disconnected before performing any service or repair procedure.
3. Locate the auto-prime switch (2-AP).
4. Push the auto-prime switch (2-AP) to the left position to disable auto-prime.
5. Follow **Install the Control Cover** in the control cover repair procedures in the motor manual.

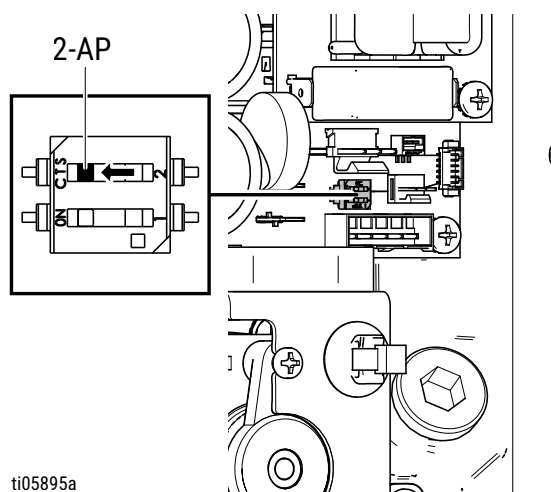


Figure 12-2: Auto-Prime Switch

SHUT DOWN THE EQUIPMENT

⚠ WARNING				

1. Follow **Pressure Relief Procedure**.
2. Follow **Flush the Equipment**.

LED INDICATOR

The LED Indicator on the front of the pump reports equipment status and error conditions.

The LED Indicator light reports equipment status with color and flashing.

Table 13-1: LED Indicator Equipment Status

LED INDICATOR	EQUIPMENT STATUS	NOTES
Red, solid	Powered on, speed set at 0 (zero), system not operating.	Be aware that the equipment is energized. To initiate equipment operation, follow Start the Equipment .
Red, solid, dim	Powering up, powering down, or power misconfigured.	Allow power up or power down sequence to complete. If power is applied and sequence does not complete within 10 seconds, check power wire connections. See Wiring Power Cables .
Yellow, solid	Calibrating. Performing startup sequence.	No action. Allow equipment to finish startup sequence. Open the fluid drain valve (G) or fluid shutoff valve (H) to allow the equipment to cycle until the startup sequence is finished.
Green, solid	Startup sequence complete.	To initiate equipment operation, follow Start the Equipment .
	Normal operation.	No action.
Green, flashing	Normal operation, stalled against pressure.	Be aware that the equipment is energized. Special case action: see LED Indicator Event Errors .

Note:

Red or yellow flashing lights or no light indicate an error. See **LED Indicator Event Errors**.

LED INDICATOR EVENT ERRORS

The LED Indicator light reports equipment errors with flashing colors, a dim red solid light, and no light.



If an event error occurs, the LED Indicator will blink a set number of times corresponding to the event code that needs acknowledgement.

Follow the **Pressure Relief Procedure** before checking or repairing the equipment.

Check all possible problems and causes before disassembling equipment.

LED INDICATOR

Table 13-2: LED Indicator Event Errors

LED INDICATOR	PROBLEM	CAUSE	SOLUTION
Red, flashing, one flash	Motor overheating, controller overheating, or cooling fan motor cannot run.	Hot operating environment, hot operating conditions, or cooling fan motor issue.	Turn the control knob to the off position. Keep the system connected to power and allow the equipment to cool before returning to operation.
			If the pump is able to run while the LED Indicator flashes red, replace the fan motor. See your related motor manual. See Related Manuals .
			Inspect the fan. Repair or replace as needed. See your related motor manual.
Red, flashing, two flashes	Motor current error.	Special-case cause.	Turn the control knob down, then back up. If the problem persists, contact Technical Support.
Red, flashing, three flashes	Voltage error or pump priming failure.	Input voltage is too high, too low, or too noisy, or an operational parameter of the motor was exceeded while priming.	Check line power voltage.
			Check control board connections. See your related motor manual.
			If the pump has flapper check valves, reduce the output pressure of the pump via a valve or the control knob. Pumps with flapper check valves are unable to prime fluid against pressure. If the problem persists or if the pump has ball check valves, examine all check valves to ensure they are checking and opening correctly.
Red, Flashing, four flashes	Motor sensor error.	Motor sensor disconnected.	Ensure the motor sensor cable is properly installed. See your related motor manual.
		Motor sensor not functioning.	Replace the motor sensor. See your related manuals. See your related motor manual.
Red, flashing, five flashes	Special-case problem.	Special-case cause.	Power cycle the unit. If the error persists, contact Technical Support.
Red, flashing, six flashes	Motor lead connection error.	One or more motor leads are connected incorrectly.	Check that all motor connections to the control board are correct.

LED INDICATOR

LED INDICATOR	PROBLEM	CAUSE	SOLUTION
Red, flashing, seven flashes	Motor sensor recalibration failure.	A motor sensor recalibration sequence failed to spin the motor or reported an invalid value.	Ensure the motor shaft is completely unloaded and the diagrams are removed, then run the sequence again. See motor recalibration instructions in your related motor manual.
Red, flashing, eight flashes	FC7, FC8, FC9, FCA, FE7, FE8, FE9, FEA models only: cooling fan error.	The fan cannot spin at the required speed.	Inspect the fan. Repair or replace as needed. See your related motor manual.
Dim red, solid	Voltage detection error.	Power disconnected.	Check power connection.
		System powering down.	Allow equipment to finish shutdown.
Yellow, flashing, continuous flash	Leak sensor alert.	Leak detected in the equipment.	Check the diaphragm for rupture or incorrect installation. Repair or replace. Ensure that the diaphragm is torqued to specification.
		The leak sensor disconnected.	Ensure the leak sensor is properly installed. See your related leak sensor manual.
Green, flashing, continuous flash	Equipment stalled against pressure.	A valve downstream in the fluid line is closed or clogged.	Open the valve.
			Follow the Pressure Relief Procedure , and clear the valve.
		Special-case cause.	Be aware that the equipment is energized. Special-case action. See your related motor manual.
			Contact Technical Support.
No light (off)	Voltage detection error.	System not powered.	Check power connection.
		Control failure.	Check the branch circuit for proper voltage.
			Replace the control board. See your related motor manual.

MAINTENANCE

Establish a preventive maintenance schedule based on the equipment service history.

NOTICE

Regularly maintain the equipment to avoid pump damage due to spills, leaks, or diaphragm failure.

INSPECT THE EQUIPMENT

Regularly inspect the equipment for worn or damaged parts. Replace as needed.

TIGHTEN FASTENERS

Regularly check and tighten all fasteners.

NOTICE

To avoid pump damage, do not over-tighten the fasteners on the equipment.

TIGHTEN CONNECTIONS

Check and tighten all fluid connections before operating the equipment. Replace worn or damaged parts as needed.

NOTICE

Firmly tighten all connections to avoid leaks and damage to equipment parts.

LUBRICATE THE EQUIPMENT

The equipment is lubricated at the factory. Re-lubricate the equipment when replacing diaphragms.

Lubricate the motor rotor when replacing diaphragms. See your related motor manual. See **Related Manuals**.

NOTICE

Do not over-lubricate the equipment. Lubricant exhaust could contaminate your fluid supply or other equipment. Excessive lubrication can also cause the equipment to malfunction.

FLUSH THE EQUIPMENT

WARNING



To avoid fire and explosion, always ground the equipment and waste container. To avoid static sparking and injury from splashing, always flush at the lowest possible pressure.

- Flush before fluid can dry or freeze in the equipment, at the end of the day, before storing, and before repairing equipment.
 - Flush at the lowest pressure possible. Check connections for leaks and tighten as needed.
 - Flush with a solvent that is compatible with the fluid being dispensed and the equipment wetted parts. Use a sanitary solution for hygienic applications.
 - Flushing schedule varies based on particular uses.
 - Always cycle the equipment during the entire flushing process.
1. Follow **Pressure Relief Procedure**.
 2. Insert the suction end of the fluid supply line into a compatible solvent.
 3. Close the fluid drain valve.
 4. Ensure the control knob is turned to off.
 5. If the fluid outlet line has a dispensing device, place a metal part of the dispensing device to a grounded metal container and hold the dispensing valve open.
 6. Ensure all fluid shutoff valves are open.
 7. Connect the equipment to a power source. See **Electrical Connections and Wiring**.
 8. Slowly increase the control knob until the equipment is operating at the set output level.
 9. Run the equipment for enough time to thoroughly clean the equipment and lines.
 10. Turn the control knob to off.
 11. Follow **Pressure Relief Procedure**.

STORE THE EQUIPMENT

 WARNING				
				

Always relieve the pressure and flush the equipment before storing the equipment for any length of time.

1. Follow **Pressure Relief Procedure**.
2. Follow **Flush the Equipment**.

NOTICE
Store the equipment at 32°F (0°C) or higher. Exposure to extreme low temperatures may result in damage to plastic parts.

CLEAN THE WETTED SECTION

Routinely clean the wetted section of the pump.

 WARNING				
				

Determine whether or not to disassemble equipment for cleaning. Clean in accordance with applicable codes and local regulations for your compatible solvent.

CLEAN IN - PLACE (CIP)

NOTICE
To avoid equipment damage, only use cleaning fluids that are compatible with materials of the wetted section. To avoid damage to stainless steel parts, do not use chlorinated cleaning fluids. Do not exceed the maximum fluid temperature for the materials of the wetted section. See Fluid Temperature Range .

1. Follow **Pressure Relief Procedure**.
2. Flush the equipment with a compatible solvent. Follow **Flush the Equipment**.

3. Circulate the compatible solvent through the equipment. Slowly cycle the equipment as the compatible solvent is circulated.

NOTE:

Thoroughly circulate the compatible solvent through the equipment and the system prior to use.

NOTICE
To avoid equipment damage, do not exceed a fluid inlet pressure of 15 psi (103 kPa, 1 bar) when cycling the equipment.

4. Follow **Pressure Relief Procedure**.

CLEAN OUT - OF - PLACE (COP)

1. Follow **Pressure Relief Procedure**.
2. Flush the equipment with a compatible solvent. Follow **Flush the Equipment**.
3. Disassemble parts as needed. See **Repair**.
4. Inspect parts for wear or damage. Replace as needed.
5. Using a brush or other COP methods, wash all wetted parts with a compatible solvent at the recommended temperature and concentration of the manufacturer.
6. Rinse the parts again with water and allow parts to completely dry.
7. Inspect the parts and re-clean any soiled parts.
8. Reassemble the equipment as needed. See **Repair**.
9. Flush the equipment with a compatible solvent. Follow **Flush the Equipment**.
10. Circulate the compatible solvent through the equipment. Slowly cycle the equipment as the compatible solvent is circulated.

NOTE:


Thoroughly circulate the compatible solvent through the equipment and the system prior to use.

NOTICE
To avoid equipment damage, do not exceed a fluid inlet pressure of 15 psi (103 kPa, 1 bar) when cycling the equipment.

11. Follow **Pressure Relief Procedure**.

TROUBLESHOOTING

Troubleshooting information for the QUANTM® pump.

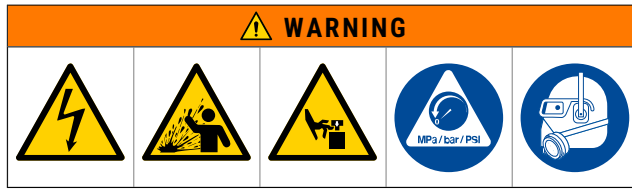

Follow the **Pressure Relief Procedure** before checking or repairing the equipment.

Check all possible problems and causes before disassembling equipment.

TROUBLESHOOTING

Table 15-1: Troubleshooting

PROBLEM	CAUSE	SOLUTION
Equipment emits beeping alert sound, LED light yellow	Pump starting automatic startup sequence. Pump is connected to a power source and the control knob is not set to the off position.	Turn the control knob to the off position or disconnect power to the system.
		If prepared to operate, allow the pump to complete the automatic startup sequence.
LED light flashing	Equipment error; special-case cause.	See LED Indicator Event Errors .
Equipment cycles, but does not prime or pump (It is normal operation for auto-prime to run and then stop once the pump is primed).	Equipment running too fast, causing cavitation before prime.	Slow down the motor speed.
	Fluid not detected by the auto-prime sensor.	Ensure the suction end of the fluid supply line is inserted into the fluid to be dispensed. Allow the auto-prime sequence to run for 30 seconds.
	Check is worn or wedged in the seat or manifold.	Replace check and seat.
	Worn seat.	Replace check and seat.
	Restricted outlet or inlet port.	Remove restriction.
	Loose inlet fittings or manifolds.	Tighten.
	Damaged manifold seats.	Replace.
Equipment does not hold fluid pressure at stall	Worn check, seats, or seals.	Replace.
	Loose manifold connections or fluid connections.	Tighten.
	Loose diaphragm shaft fastener.	Tighten.
Equipment leaking fluid externally from joints [‡]	Loose manifold connections or fluid cover connections.	Tighten.
	Worn manifold seats or seals.	Replace.
Equipment leaks fluid externally from the joint between the center manifold and manifold. (Flapper pumps only)	Worn or damaged gaskets.	Replace gaskets. See Reassemble the Flapper Check Valves .

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
	Gasket not installed properly. Manifold not fully installed at joint to the center manifold.	Thoroughly grease the gasket and the inner diameter of the manifold before assembling manifold. Ensure the gasket is fully installed on the outer diameter of the center manifold. Ensure the manifold is properly aligned to the equipment. Ensure the center manifold and manifold are fully connected at the joint. See Reassemble the Flapper Check Valves.
Equipment stalled, will not cycle	Fluid line clogged or valves closed.	Inspect; clear. Open valves downstream of the equipment.
	Motor or controller wired improperly.	Wire per instructions in your related motor manual. See Related Manuals .
	Leak sensor tripped.	Check diaphragm for rupture or incorrect installation. Repair or replace.
Reduced performance	Fluid line clogged.	Inspect; clear.
	Checks are sticky or leaking.	Clean or replace.
	Diaphragm (or backup diaphragm, if applicable) ruptured.	Replace.
Air bubbles in fluid	Fluid line is loose.	Tighten.
	Diaphragm (or backup diaphragm, if applicable) ruptured.	Replace.
	Loose manifolds.	Tighten manifold fasteners or clamps.
	Damaged seats or seals.	Replace seats or seals.
	Loose diaphragm shaft fastener.	Tighten.
Fluid leaking from lower ports on the equipment or fluid on the floor.	Loose diaphragm shaft fastener.	Tighten.
	Diaphragm rupture. Leak in the equipment.	Replace.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Equipment stalls at pressure below maximum pump operation pressure.	Pressure Control Mode is selected.	Select Flow Control Mode. See Select Control Mode .
Equipment suddenly stops operating or shuts down.	Ground fault circuit interrupter (GFCI) tripped.	Remove controller from the GFCI circuit.
	Poor supply power.	Check connections. Determine and fix the source of the problem with the supply power.
	Exceeded operational parameters.	See LED Indicator Event Errors for event codes.
	Leak sensor alert. Leak detected in the equipment.	Check the diaphragm for rupture or incorrect installation. Repair or replace.
	The leak sensor disconnected.	Ensure the leak sensor is properly installed. See your related leak sensor manual.



WARNING



‡ Do not modify or repair explosion proof joints. Modifying explosion proof joints will invalidate the Hazardous Location Certification of the equipment and may produce an explosion hazard.

REPAIR

NOTE:

Repair kits are available (purchase separately).

⚠️ WARNING

This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as splashing fluid and moving parts, follow **Pressure Relief Procedure** when you stop operating and before cleaning, checking, or servicing the equipment.

To avoid severe burns, do not touch hot fluid or hot equipment.

Follow **Prepare Equipment for Repair** before performing any service or repair to the equipment.

PREPARE EQUIPMENT FOR REPAIR

⚠️ DANGER

				
---	--	--	--	--

DANGER

SEVERE ELECTRIC SHOCK HAZARD

This equipment can be powered by more than 240 V. Contact with this voltage will cause death or serious injury.

- Turn off and disconnect power before servicing or repairing equipment.
- All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.

⚠️ WARNING

				
--	--	--	--	--

Models in Explosive Atmospheres or Hazardous (Classified) Locations: To avoid injury from fire and explosion, move the equipment to a non-explosive or non-hazardous location before performing any service or repair to the equipment.

- Always complete the following procedure before performing any service or repair to the equipment.
1. Follow **Pressure Relief Procedure**.
 2. Follow **Flush the Equipment**.
 3. Verify that the equipment is turned off and power to the system is disconnected before performing any service or repair procedure.
 4. Disconnect all fluid lines.
 5. Optional: Mount the back of the pump (opposite side from the motor) to the maintenance bracket stand (purchase separately); see your related parts manual. See **Related Manuals**. This positions the pump facing up, enabling easy working access to the pump and motor. The stand can be mounted to a workbench through the mounting holes on the feet.
 - a. Loosen the four bolts that hold the logo plate (if present) to the pump.

- b. Slide the bracket stand behind the bolts.
- c. Tighten the bolts.
- d. After repairing the pump, remove the pump from the bracket stand and return it to service.

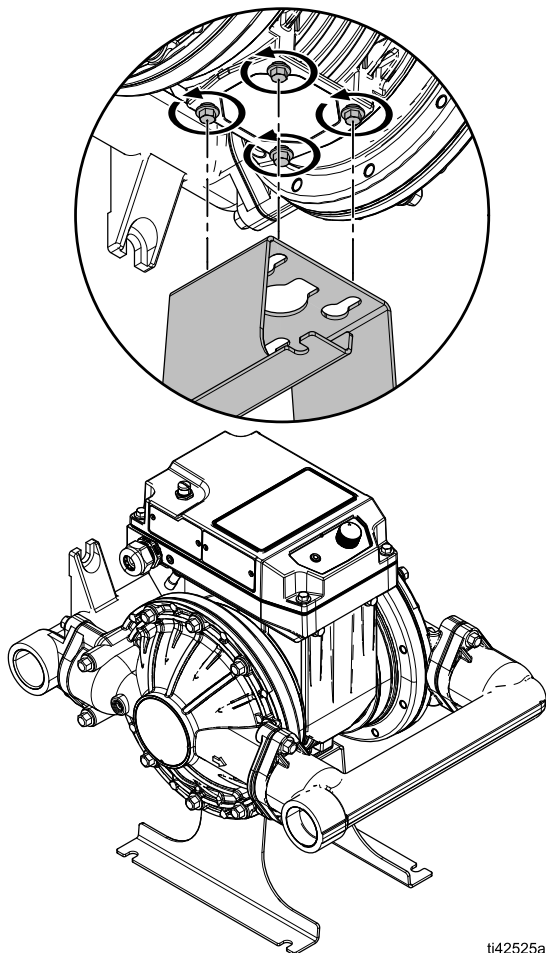


Figure 16-1: Maintenance Bracket Stand

REPAIR THE CHECK VALVES (BALL PUMPS)

Required Tools:

- 10 mm socket wrench (for all i30 (QTC) models, i80 (QTD) plastic models, and i120 (QTE) plastic models)
- 13 mm socket wrench (for i80 (QTD) metal models and i120 (QTE) metal models)

DISASSEMBLE THE BALL CHECK VALVES

⚠ WARNING



To avoid severe burns, do not touch hot fluid or hot equipment.

1. Follow **Prepare Equipment for Repair**.
2. Drain the equipment.

NOTE:

After draining, rotate the equipment to positions which will aid disassembly.

3. On the outlet manifold (4), remove all fasteners (6).
4. Remove the outlet manifold (4), seals (10, if applicable), guides (9b, if applicable), checks (9), and seats (8).

NOTE:

Use care while removing manifolds to avoid damage to check valve components.

5. On the inlet manifold (5), remove all fasteners (6, 6b, if applicable).
6. Remove the inlet manifold (5), seals (10, if applicable), guides (9b, if applicable), checks (9), and seats (8).


NOTE:

Use care while removing manifolds to avoid damage to check valve components.

7. Clean and inspect parts for wear or damage. Replace as needed.

REASSEMBLE THE BALL CHECK VALVES

1. Align and place seats (8), checks (9), guides (9b, if applicable), seals (10, if applicable), and manifolds (4, 5), exactly as shown for your equipment model. See your related parts manual. See **Related Manuals**.
2. Use the fasteners (6, 6b, if applicable) to loosely attach the manifolds (4, 5) to the fluid covers (3). After all components are properly aligned, torque the fasteners (6, 6b, if applicable) on the manifolds (4, 5). See **Torque Fasteners**.

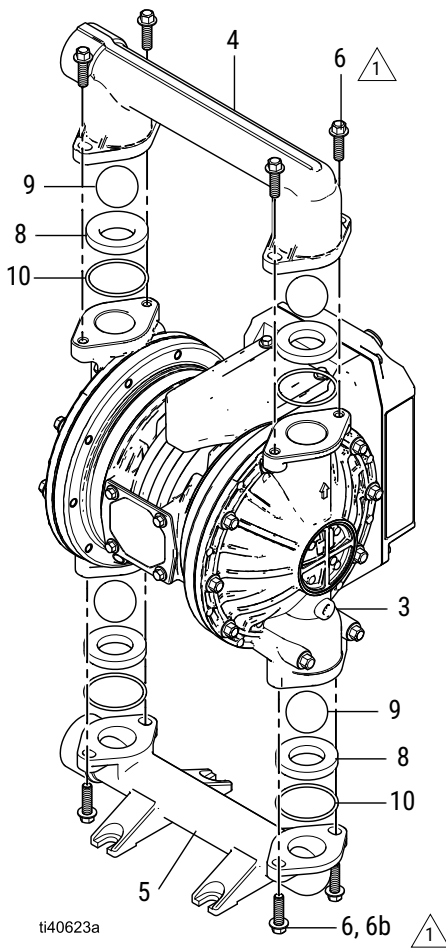

1 See **Torque Fasteners**.

Figure 16-2: Check Valves

REPAIR THE CHECK VALVES (FLAPPER PUMPS)

Tools Required:

- Torque wrench
- 4 mm hex key
- 15 mm socket wrench

See parts manual in **Related Manuals** for available repair kits.

DISASSEMBLE THE FLAPPER CHECK VALVES

⚠ WARNING				
				
To avoid severe burns, do not touch hot fluid or hot equipment.				

1. Follow **Prepare Equipment for Repair**.
2. Remove clevis and cotter pins (35, 36) from manifolds (5, 4).
3. Remove bolts (6).
4. Remove manifolds from fluid covers (3).

NOTE:

Use care while removing manifolds to avoid damage to check valve components.

5. Remove all check valve components and gaskets (53).

NOTE:

Pay attention to the orientation of the check valve components for reassembly.

6. Clean and inspect all parts for wear or damage. Replace as needed.

NOTE:

To ensure proper seating, always replace all gaskets, seats, and check valve components when performing check valve repairs.

REASSEMBLE THE FLAPPER CHECK VALVES

1. Install all check valve components in the correct orientation.

NOTE:

Ensure that the check valves and seating areas are clean.

NOTE:

Install the flapper valves with the solid rubber side facing toward the seat.

Install gaskets (53) onto the outer diameter of the center manifolds (54).

NOTE:

Before reassembling manifolds, grease both surfaces of the gasket (53) and the mating inner diameter of the manifolds (5, 4).

NOTE:


Always replace the manifold gaskets (53) when repairing the equipment.

2. Align manifolds (5, 4) with the fluid covers (3) and center manifold (54).
3. Simultaneously connect the manifolds (5, 4) to the joints at the fluid cover (3) and center manifold (54).

NOTE:

For proper installation, ensure that the manifold joints are connected at the same time.

4. Insert screws (6) and torque. See **Torque Sequence**.

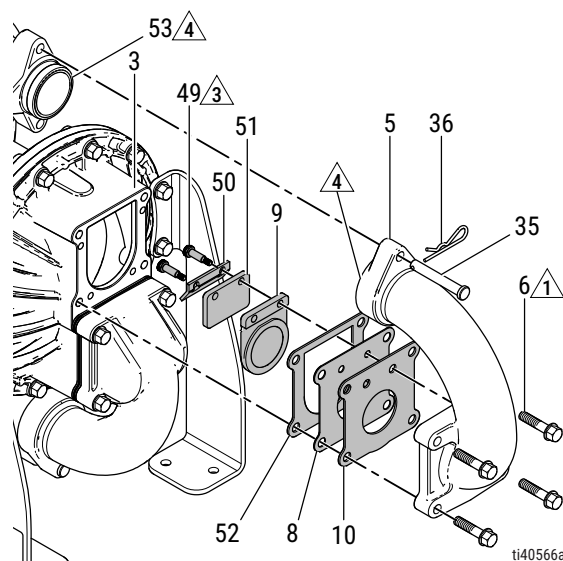


1 Apply medium-strength (blue) thread locker to the threads. Torque to 190–220 in-lb (21.5–24.9 N·m). See **Torque Sequence**.

3 Apply medium-strength (blue) thread locker to the threads. Torque to 20–25 in-lb (2.26–2.82 N·m).

4 Grease.

Figure 16-3: Check Valve Section (Fluid Inlet)

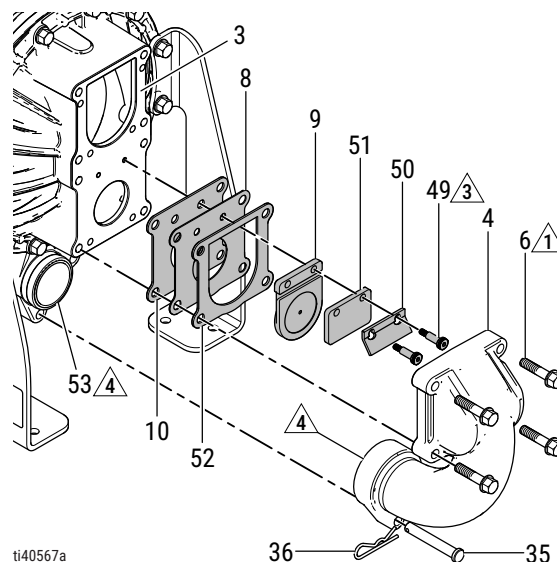

1. Apply medium-strength (blue) thread locker to the threads. Torque to 190–220 in-lb (21.5–24.9 N·m). See **Torque Sequence**.

3. Apply medium-strength (blue) thread locker to the threads. Torque to 20–25 in-lb (2.26–2.82 N·m).

4. Grease.

Figure 16-4: Check Valve Section (Fluid Outlet)

REPAIR THE STANDARD DIAPHRAGMS

Required Tools:

- 10 mm socket wrench (for all i30 (QTC) models, i80 (QTD) plastic models, and i120 (QTE) plastic models)
- 13 mm socket wrench (for i80 (QTD) metal models and i120 (QTE) metal models)
- Torque wrench
- 25 mm open-end wrench
- Lubriplate® Synxtreme® HD-2 grease (part number 18F990) or equivalent NLGI Grade 2 synthetic grease with calcium sulfonate base

NOTE:

Lubricate the motor rotor when replacing diaphragms. See your related motor manual. See **Related Manuals**.

DISASSEMBLE THE STANDARD DIAPHRAGMS

⚠ WARNING				
				
To avoid severe burns, do not touch hot fluid or hot equipment.				

1. Follow **Prepare Equipment for Repair**.

2. Follow **Disassemble the Check Valves**.

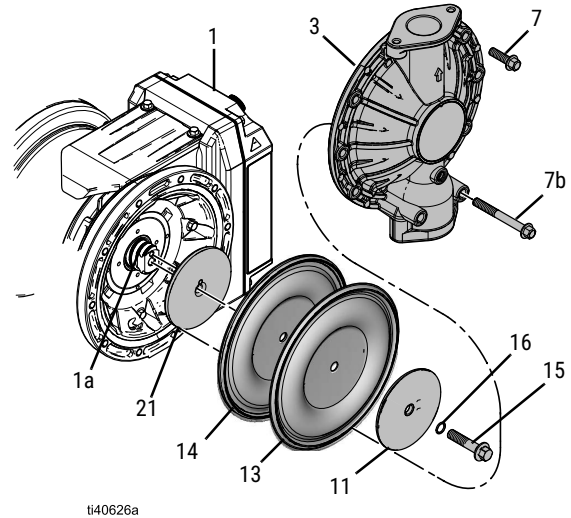


Figure 16-5: Disassemble Standard Diaphragms

3. Remove all fasteners (7, 7b, if applicable) from the fluid covers (3). Remove the fluid covers (3).
4. Use an applicable wrench to firmly hold one diaphragm fastener (15) in place. At the same time, use an applicable wrench to loosen the fastener (15) on the opposite side.
5. Remove the fastener (15), seal (16, if applicable), fluid plate (11), diaphragm (13), and diaphragm backer (14) from the shaft (1a) on the side of the pump with the loosened fastener (15).
6. Loosen the remaining diaphragm fastener (15).

If the first loosened diaphragm fastener (15) is on the side of the shaft (1a) with the wrench flat:

- a. Use an applicable wrench to firmly hold the flat of the shaft (1a) in place. At the same time, use an applicable wrench to loosen the remaining diaphragm fastener (15).

If the first loosened diaphragm fastener (15) is opposite the wrench flat on the shaft (1a):

- a. Follow the procedure to lubricate the rotor in your related motor manual to access the flat of the shaft (1a). See **Related Manuals**.
- b. After the flat of the shaft (1a) is accessible, use an applicable wrench to firmly hold the flat of the shaft (1a) in place. At the same time, use an applicable wrench to loosen the remaining diaphragm fastener (15).

7. Remove the remaining fastener (15), seal (16, if applicable), fluid plate (11), diaphragm (13), and diaphragm backer (14), and air-side plate (21) from the shaft (1a).

NOTE:

Do not remove the diaphragm shaft (1a) from the motor (1).

NOTICE

To avoid damage to the rotor or equipment, do not remove the shaft (1a) from the motor (1). Removing the shaft will cause the rotor balls to dislodge from the rotor and the rotor will not function properly.

8. Clean and inspect parts for wear or damage. Replace parts as needed.
9. Lubricate the rotor. See your related motor manual. See **Related Manuals**.


REASSEMBLE THE STANDARD DIAPHRAGMS

NOTICE

After reassembly, allow the threadlocker to cure for 12 hours, or per instructions of the manufacturer, prior to operating the equipment. The equipment will be damaged if the diaphragm shaft fastener loosens.

1. Prepare the equipment for reassembly.
 - a. Ensure all surfaces are entirely clean and free from any contaminants, such as grease and cured threadlocker.
 - b. Clean threads using a ½ in. brass wire brush to remove any cured threadlocker residue from the ball screw internal thread and the diaphragm bolt thread.
 - c. Discard the fluid plate O-ring (16) and replace it with a new one.

2. Lubricate the diaphragm (13) immediately before reassembly by spraying a 10:1 soap solution onto both sides of the diaphragm's center area (an area equal to the fluid plate area).

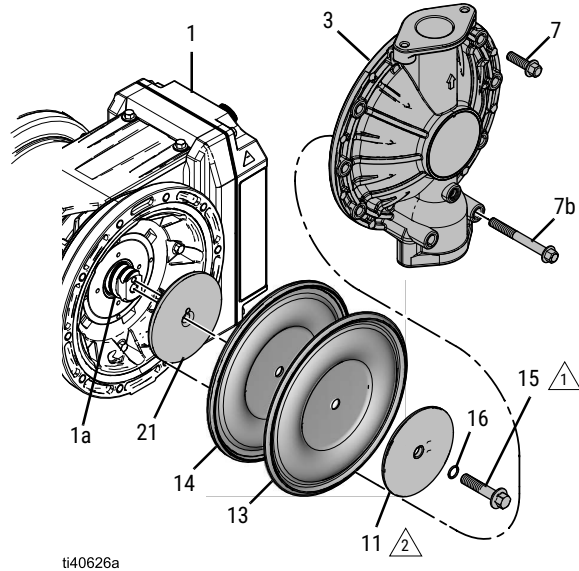

1 Apply a medium-strength threadlocker to the shaft side of the fastener to attach the diaphragm to the shaft.

2 Face the rounded side toward the diaphragm (13).

Figure 16-6: Reassemble Standard Diaphragms

3. Assemble the air-side plate (21), diaphragm backers (14), diaphragms (13), fluid side plates (11), and seals (16, if applicable) with the fasteners (15) exactly as shown for your equipment model. See your related parts manual. See **Related Manuals**.

NOTE:

Face the rounded side of the fluid side plate (11) toward the diaphragm (13).


NOTE:

Regardless of any markings on the diaphragm backer (14), always assemble the diaphragm backer (14) so that the outer bead cups around (not away from) the outer bead of the diaphragm (13).

NOTE:

Apply threadlocker to the fastener (15) for all diaphragm assemblies.

4. Install the assembled diaphragm components on the side of the shaft (1a) that does not have flats, and hand-tighten the fastener (15).
5. Use an applicable wrench to firmly hold the motor shaft (1a) by the flats. At the same time, torque the opposite fastener (15) in two steps: first to 25 ft-lb (34 N·m) and then to final torque in a smooth, continuous motion:
 - All models except i30 with plastic fluid plates: 50 ft-lb (68 N·m)
 - Model i30 with plastic fluid plates: 42.5 ft-lb (57.6 N·m).

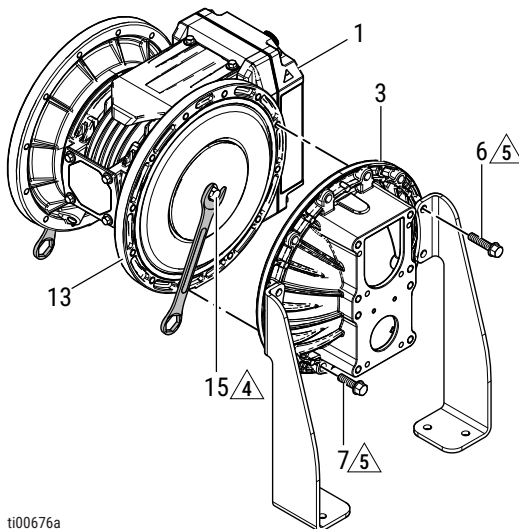

4 Torque to 50 ft-lb (68 N·m) for all models except i30 models with plastic fluid plates. For i30 models with plastic fluid plates, torque to 42.5 ft-lb (57.6 N·m).

5 See **Torque Fasteners**.

Figure 16-7: Tighten Standard Diaphragms

6. Repeat fastener (15) torque step 5 on the opposite side.

7. Rotate the shaft of the motor to center it in the motor, so that neither diaphragm is extended away from the housing, which could inhibit installing the fluid covers.

NOTE:

If it is not possible for both diaphragms to be in contact with the housing, choose one diaphragm to position first. Once the first fluid cover is fastened, slowly drive the motor so that the other diaphragm is in contact with the housing. Then fasten the second fluid cover.

8. Align the fluid covers (3) to the motor (1).

NOTE:

On flapper covers, the circular outlet hole must be at the base of the equipment. See **Reassemble the Standard Diaphragms**.

9. Install fasteners (7, 7b, if applicable) to hold the fluid covers (3) in place.

NOTE:

To ensure proper spacing and alignment of the manifolds (4, 5), install fasteners (7, 7b, if applicable) loose enough to allow for fluid cover movement before securing the fluid covers (3) in place.

10. Torque all fasteners (6, 7, 7b, as applicable). Follow **Torque Fasteners**.
11. Reassemble the check valves and manifolds as explained in **Reassemble the Check Valves**.

REPAIR THE OVERMOLDED DIAPHRAGMS

Required Tools:

- 10 mm socket wrench (for all i30 (QTC) models, i80 (QTD) plastic models, and i120 (QTE) plastic models)
- 13 mm socket wrench (for i80 (QTD) metal models and i120 (QTE) metal models)
- Torque wrench
- 25 mm open-end wrench
- Lubriplate® Synxtreme® HD-2 grease (part number 18F990) (or equivalent NLGI Grade 2 synthetic grease with calcium sulfonate base)

NOTE:

Lubricate the motor rotor when replacing diaphragms. See your related motor manual. See **Related Manuals**.

DISASSEMBLE THE OVERMOLDED DIAPHRAGMS

 WARNING				
				
To avoid severe burns, do not touch hot fluid or hot equipment.				

1. Follow **Prepare Equipment for Repair**.
2. Follow **Disassemble the Check Valves**.
3. Remove all fasteners (7, 7b, if applicable) from the left side fluid cover (3). Remove the fluid cover (3).

4. Firmly grip the outer edge of the exposed diaphragm (13) and rotate counterclockwise to loosen. Remove the diaphragm (13).

NOTE:

Do not remove the diaphragm shaft (1a) from the motor (1).

NOTICE

To avoid damage to the rotor or equipment, do not remove the shaft (1a) from the motor (1). Removing the shaft will cause the rotor balls to dislodge from the rotor and the rotor will not function properly.

5. Remove the remaining diaphragm (13).

If the first loosened diaphragm (13) is on the side of the shaft (1a) with the wrench flat:


- a. Leave the right side fluid cover secured to the motor. Use an applicable wrench to firmly hold the flat of the shaft (1a) in place and rotate counterclockwise to loosen. Do not remove the diaphragm shaft (1a) from the motor (1).
- b. Remove all fasteners (7, 7b, if applicable) from the right side fluid cover (3).
- c. Remove the fluid cover (3).
- d. Remove the remaining diaphragm (13) while using an applicable wrench to hold the flat of the shaft (1a) in place.

If the first loosened diaphragm (13) is on the side of the shaft (1a) opposite the wrench flat:

- a. Follow the procedure to lubricate the rotor in your related motor manual to access the flat of the shaft (1a). See **Related Manuals**.
- b. After the flat of the shaft (1a) is accessible, use an applicable wrench to firmly hold the flat of the shaft (1a) in place. At the same time, securely grip the outer edge of the opposite diaphragm (13) and rotate counterclockwise to loosen.

6. Clean and inspect parts for wear or damage. Replace parts as needed.

7. Lubricate the rotor. See your related motor manual. See **Related Manuals**.

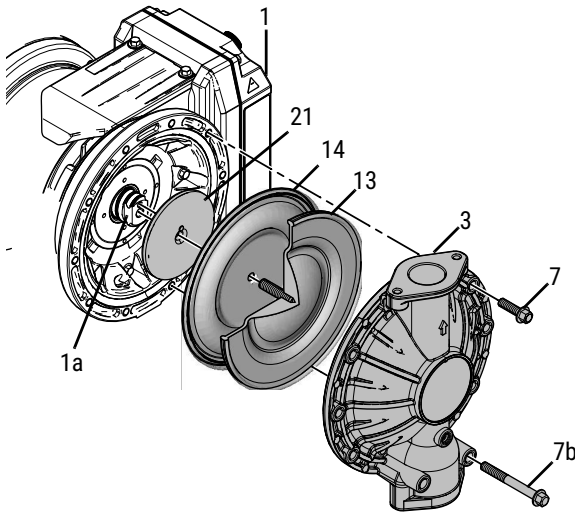

ti40627a

Figure 16-8: Overmolded Diaphragms

REASSEMBLE THE OVERMOLDED DIAPHRAGMS

NOTICE

After reassembly, allow the thread locker to cure for 12 hours, or per instructions of the manufacturer, prior to operating the equipment. The equipment will be damaged if the diaphragm shaft fastener loosens.


1. On the side of the shaft (1a) opposite of the wrench flat, install the air-side plate (21), diaphragm backer (14), and diaphragm assembly (13, 15) into the shaft (1a). Firmly tighten.

NOTE:

Regardless of any markings on the diaphragm backer (14), always assemble the diaphragm backer (14) so that the outer bead cups around (not away from) the outer bead of the diaphragm (13).

NOTE:

Apply thread locker to the fastener (15) for all diaphragm assemblies.

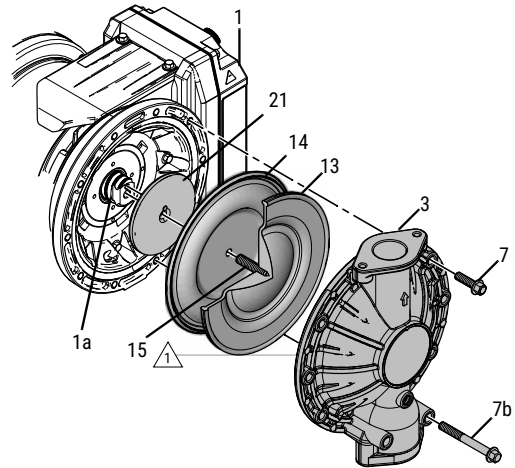

ti40627a

1. Apply a medium-strength thread locker to the shaft side of the fastener to attach the diaphragm to the shaft.

Figure 16-9: Reassemble Overmolded Diaphragms

REPAIR

2. Use an applicable wrench to hold flat of the shaft (1a) firmly in place. At the same time, grip the diaphragm (13) securely around the outer edge and rotate clockwise to firmly tighten.
3. Rotate the shaft (1a) until it is centered in the motor (1).

NOTE:

If it is not possible for both diaphragms to be in contact with the housing, choose one diaphragm to position first. Once the first fluid cover is fastened, slowly drive the motor so that the other diaphragm is in contact with the housing. Then fasten the second fluid cover.


4. On the side of the equipment with the installed diaphragm, align the fluid cover (3) to the motor (1).
5. Loosely install the fasteners (7, 7b, if applicable) to hold the fluid cover (3) in place.
6. On the side of the shaft (1a) with the wrench flat, install the air-side plate (21), diaphragm backer (14), and diaphragm assembly (13, 15) into the shaft (1a). Firmly tighten.
7. Align the fluid cover (3) to the motor (1).
8. Loosely install the fasteners (7, 7b, if applicable) to hold the fluid cover (3) in place.

NOTE:

To ensure proper spacing and alignment of the manifolds (4, 5), install fasteners (7, 7b, if applicable) loose enough to allow for fluid cover movement before securing the fluid covers (3) in place.

9. Torque all fasteners (7, 7b, if applicable). Follow **Torque Fasteners**.

10. Reassemble the check valves and manifolds as explained in **Reassemble the Check Valves**.

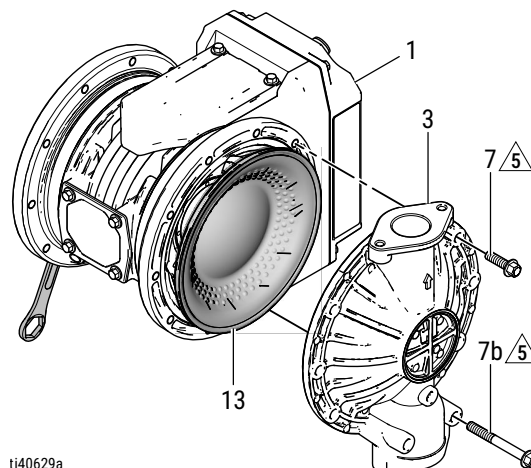

5 See **Torque Fasteners**.

Figure 16-10: Tighten Overmolded Diaphragms

RECYCLING AND DISPOSAL

END OF EQUIPMENT LIFE

At the end of the useful life of the equipment, disassemble and recycle the equipment in a responsible manner.

- Follow **Pressure Relief Procedure**.
- Drain and dispose of fluids according to applicable regulations. See the Safety Data Sheet (SDS) of the material manufacturer.
- Remove motors, circuit boards, LCDs (liquid crystal displays), and other electronic components. Recycle according to applicable regulations.
- Do not dispose of electronic components with household or commercial waste.



- Deliver remaining equipment to a recycling facility.

TORQUE FASTENERS

TORQUE INSTRUCTIONS

- To ensure proper sealing, torque fasteners using the following procedure.
- 1.Start all fasteners a few turns.
 - 2.Follow the torque sequence to turn down each fastener until each fastener is slightly under the specified torque. See **Torque Sequence**.
 - 3.Follow the torque sequence to turn each fastener by 1/2 turn or less until each fastener is at the specified torque. See **Torque Sequence**.

TORQUE SEQUENCE

Fully torque all fasteners (6, 7, 7b, as applicable) on the fluid covers (3) before torquing the fasteners (6, 6b, if applicable) on the manifolds (4, 5).

Follow **Torque Instructions**.

NOTICE

To avoid pump damage, do not over-torque the fasteners on the equipment.

Table 18-1: Torque Sequence for i30 (QTC) Models

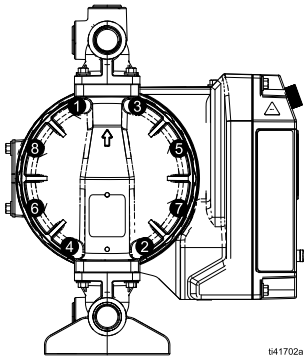
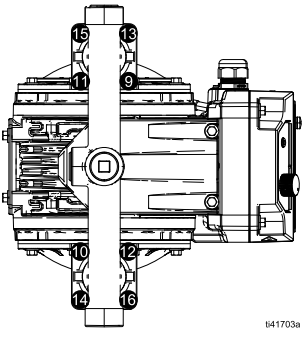
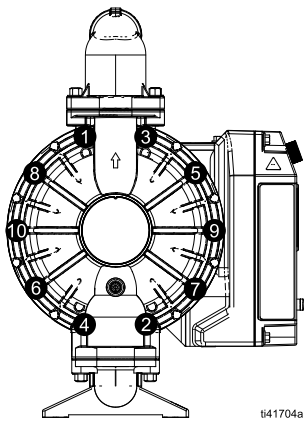
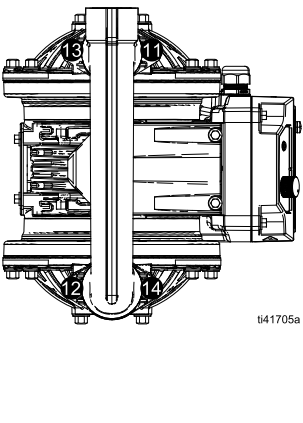
Fluid Covers (3)	Manifolds (4, 5)
For i30 plastic models: Torque fasteners (7, 7b, if applicable) to 90 in-lb (10.2 N·m).	For i30 plastic models: Torque fasteners (6, 6b, if applicable) to 90 in-lb (10.2 N·m)
For i30 metal models: Torque fasteners (7, 7b, if applicable) to 110 in-lb (12.4 N·m).	For i30 metal models: Torque fasteners (6, 6b, if applicable) to 110 in-lb (12.4 N·m).
	

Table 18-2: Torque Sequence for i80 (QTD) Models

Fluid Covers (3)	Manifolds (4, 5)
Torque fasteners (7, 7b, if applicable) to 190–220 in-lb (21–25 N·m).	For i80 (QTD) plastic models: Torque fasteners (6, 6b, if applicable) to 80–90 in-lb (9–10 N·m). For i80 (QTD) metal models: Torque fasteners (6, 6b, if applicable) to 120–150 in-lb (14–17 N·m).
	

TORQUE FASTENERS

Table 18-3: Torque Sequence for i120 (QTE) Ball Models

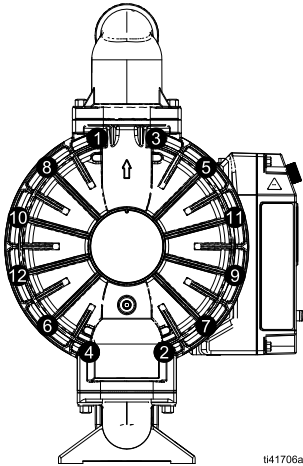
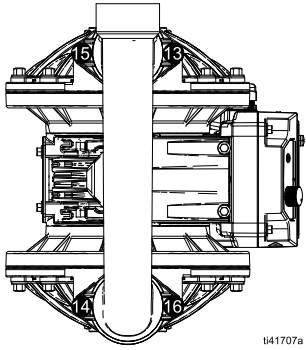
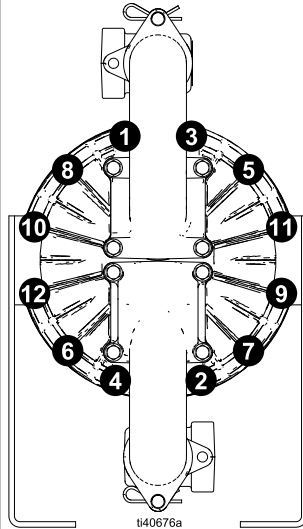
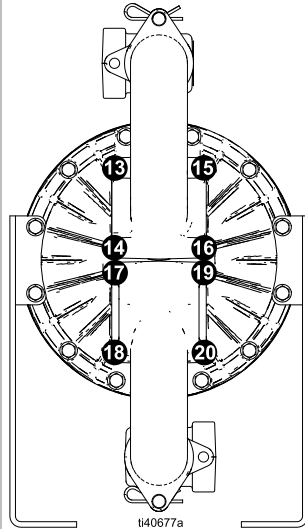
Fluid Covers (3)	Manifolds (4, 5)
Torque fasteners (7, 7b, if applicable) to 190–220 in-lb (21–25 N·m).	For i120 (QTE) plastic models: Torque fasteners (6, 6b, if applicable) to 150–160 in-lb (17–18 N·m). For i120 (QTE) aluminum models: Torque fasteners (6, 6b, if applicable) to 120–150 in-lb (14–17 N·m). For i120 (QTE) metal models, except aluminum: Torque fasteners (6, 6b, if applicable) to 190–220 in-lb (21–25 N·m).
	

Table 18-4: Torque Sequence for i120 (QTE) Flapper Models

Fluid Covers	Manifolds
Torque to 190–220 in-lb (21–25 N·m)	Torque to 190–220 in-lb (21–25 N·m)
	

PERFORMANCE CHARTS

Performance may vary based on pump materials, suction condition, discharge pressure, fluid type, and control mode.

For a description of the control modes, see **Select Control Mode**.

REFERENCE	CONTROL KNOB SETTING
A	100%
B	80%
C	60%
D	40%
E	20%

PERFORMANCE CHARTS: PRESSURE VS. FLOW FOR i30 (QTC) MODELS

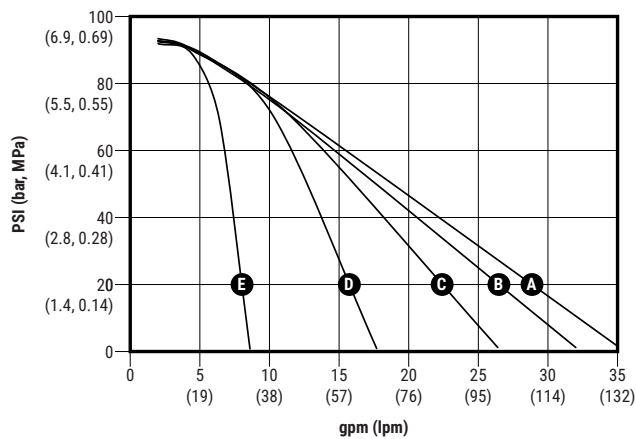


Figure 19-1: Performance Chart: Flow Control Mode for i30 (QTC) Models

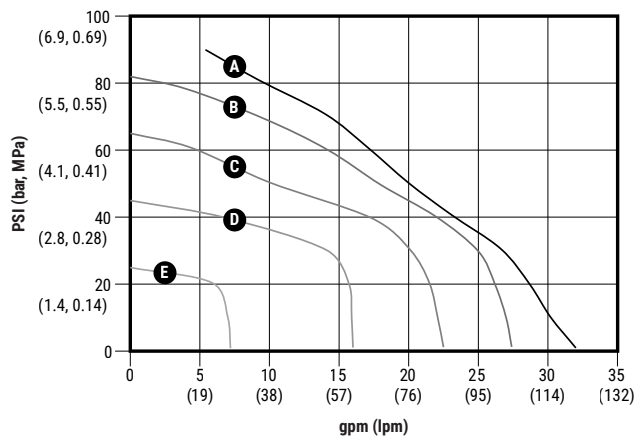


Figure 19-2: Performance Chart: Pressure Control Mode for i30 (QTC) Models

PERFORMANCE CHARTS: PRESSURE VS. FLOW FOR i80 (QTD) MODELS

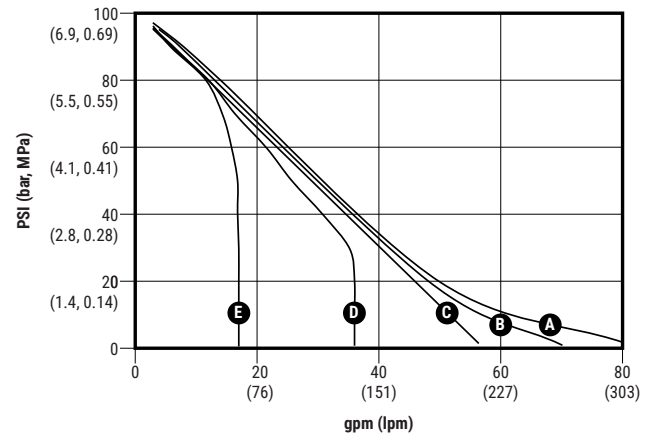


Figure 19-3: Performance Chart: Flow Control Mode for i80 (QTD) Models

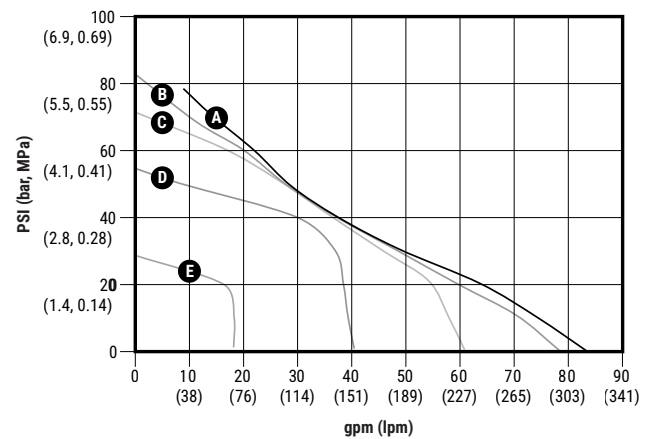


Figure 19-4: Performance Chart: Pressure Control Mode for i80 (QTD) Models

PERFORMANCE CHARTS

PERFORMANCE CHARTS: PRESSURE VS. FLOW FOR i120 (QTE) BALL MODELS

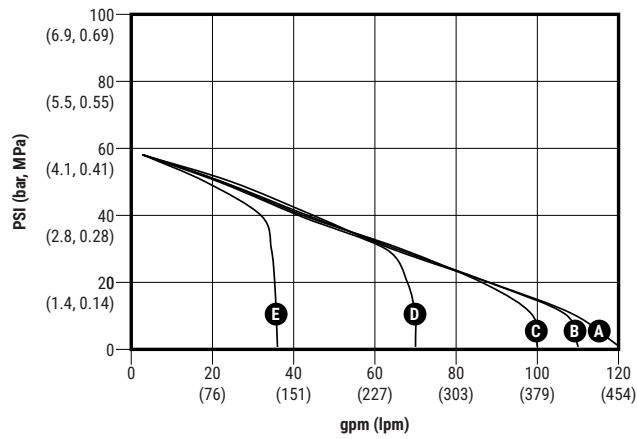


Figure 19-5: Performance Chart: Flow Control Mode for i120 (QTE) Ball Models

PERFORMANCE CHARTS: PRESSURE VS. FLOW FOR i120 (QTE) FLAPPER MODELS

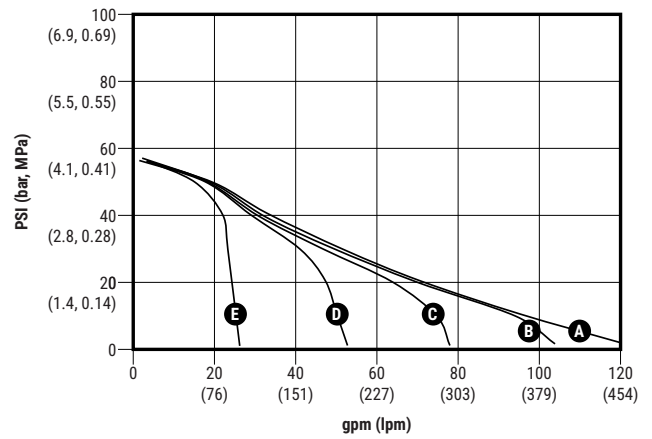


Figure 19-7: Performance Chart: Flow Control Mode for i120 (QTE) Flapper Models

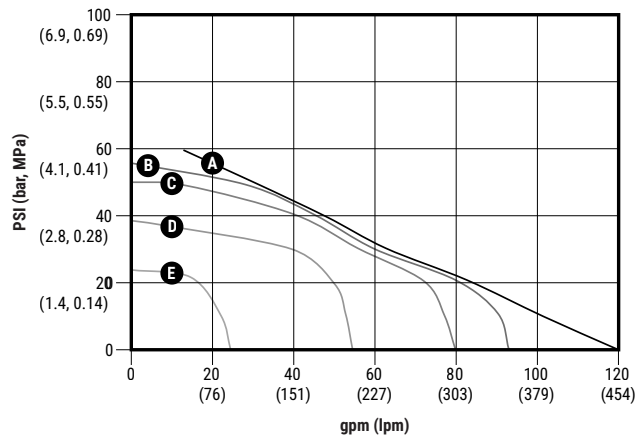


Figure 19-6: Performance Chart: Pressure Control Mode for i120 (QTE) Ball Models

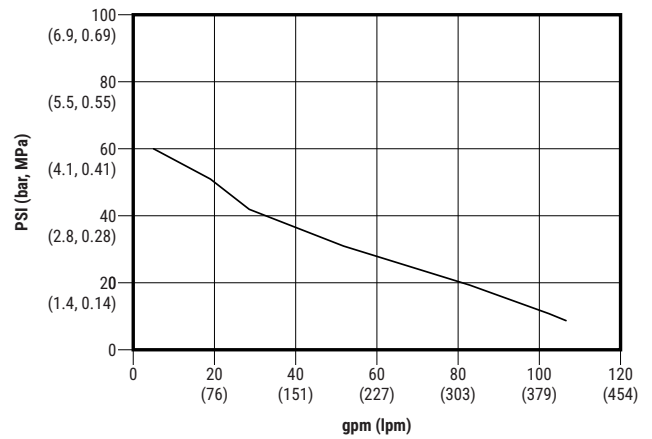


Figure 19-8: Performance Chart: Pressure Control Mode for i120 (QTE) Flapper Models

DIMENSIONS

DIMENSIONS FOR i30 (QTC) MODELS

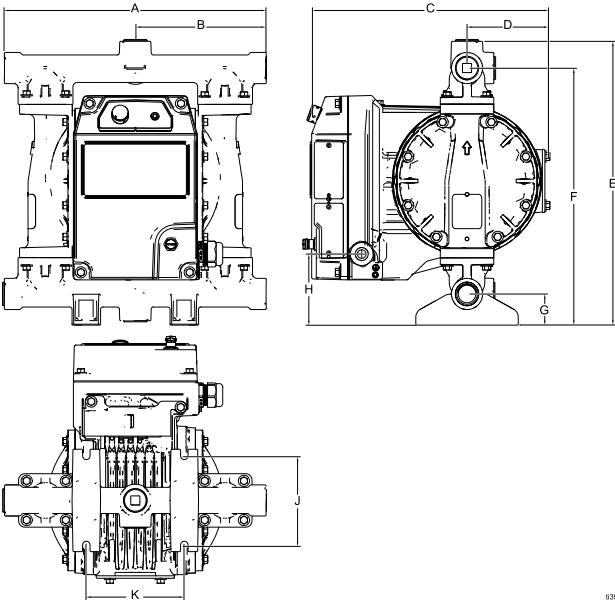


Figure 20-1: Dimension Diagram for i30 (QTC) with Metal Wetted Section

Ref.	Wetted Section Material			
	AL		SS	
	in.	cm	in.	cm
A	14.70	37.34	13.90	35.31
B	7.35	18.67	6.58	16.71
C	13.25	33.66	13.25	33.66
D	4.57	11.61	4.57	11.61
E	15.94	40.49	13.70	34.80
F	14.44	36.68	12.90	32.77
G	1.76	4.47	1.10	2.79
H	3.70	9.40	2.20	5.59
J	5.00	12.70	5.00	12.70
K	5.50	13.97	5.50	13.97

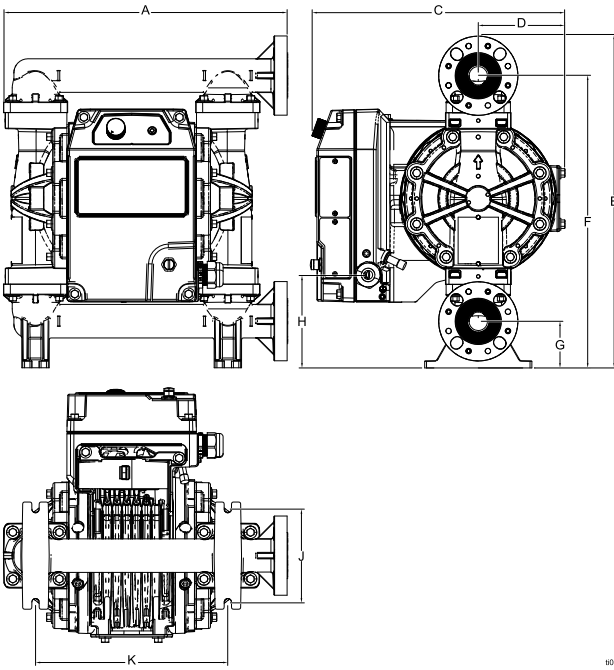


Figure 20-2: Dimension Diagram for i30 (QTC) with Plastic Wetted Section, End Flange

Ref.	Wetted Section Material					
	CP		PP		PV	
	in.	cm	in.	cm	in.	cm
A	15.20	38.61	15.20	38.61	15.20	38.61
C	13.25	33.66	13.25	33.66	13.25	33.66
D	4.57	11.61	4.57	11.61	4.57	11.61
E	17.80	45.21	17.80	45.21	17.80	45.21
F	15.70	39.88	15.70	39.88	15.70	39.88
G	2.50	6.35	2.50	6.35	2.50	6.35
H	4.69	11.91	4.69	11.91	4.69	11.91
J	5.00	12.70	5.00	12.70	5.00	12.70
K	10.55	26.8	10.42	26.50	10.37	26.34

DIMENSIONS

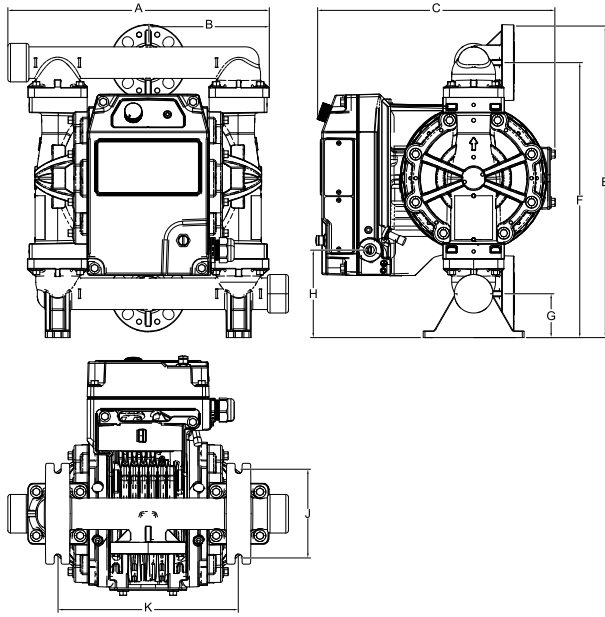


Figure 20-3: Dimension Diagram for i30 (QTC) Model with Plastic Wetted Section, Center Flange

Ref.	Wetted Section Material					
	CP		PP		PV	
	in.	cm	in.	cm	in.	cm
A	16.0	40.60	16.0	40.60	16.0	40.60
B	8.00	20.32	8.00	20.32	8.00	20.32
C	13.25	33.66	13.25	33.66	13.25	33.66
D	4.57	11.61	4.57	11.61	4.57	11.61
E	17.80	45.21	17.80	45.21	17.80	45.21
F	15.70	39.88	15.70	39.88	15.70	39.88
G	2.50	6.35	2.50	6.35	2.50	6.35
H	4.69	11.91	4.69	11.91	4.69	11.91
J	5.00	12.70	5.00	12.70	5.00	12.70
K	10.55	26.80	10.42	26.50	10.37	26.34

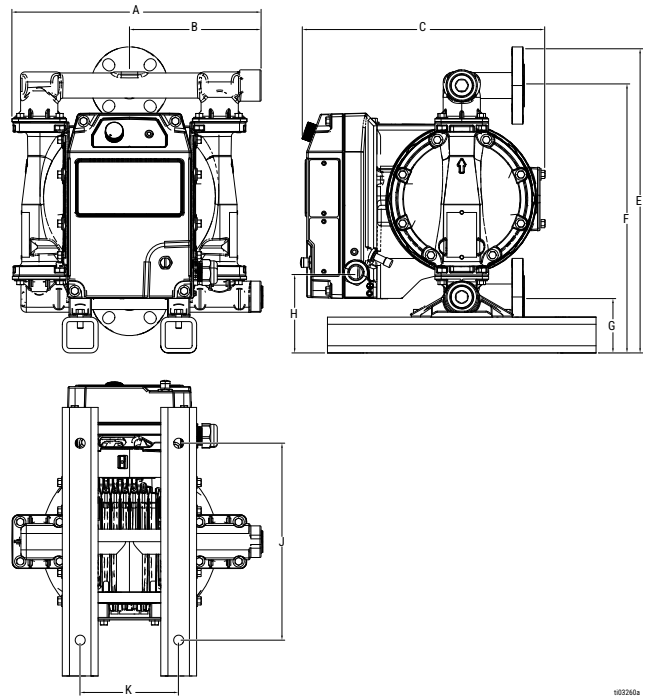


Figure 20-4: Dimension Diagram for i30 (QTC) Model with Metal Wetted Section, Center Flange (shown at rear)

Ref.	Wetted Section Material	
	SS	
	in.	cm
A	13.92	35.36
B	7.35	18.67
C	13.66	34.70
D	4.65	11.81
E – flange at rear	17.09	43.41
E – flange at top	18.44	46.84
F	14.94	37.95
G	3.13	7.95
H	4.49	11.40
J	11.00	7.95
K	5.50	13.97

DIMENSIONS

DIMENSIONS FOR I80 (QTD) MODELS

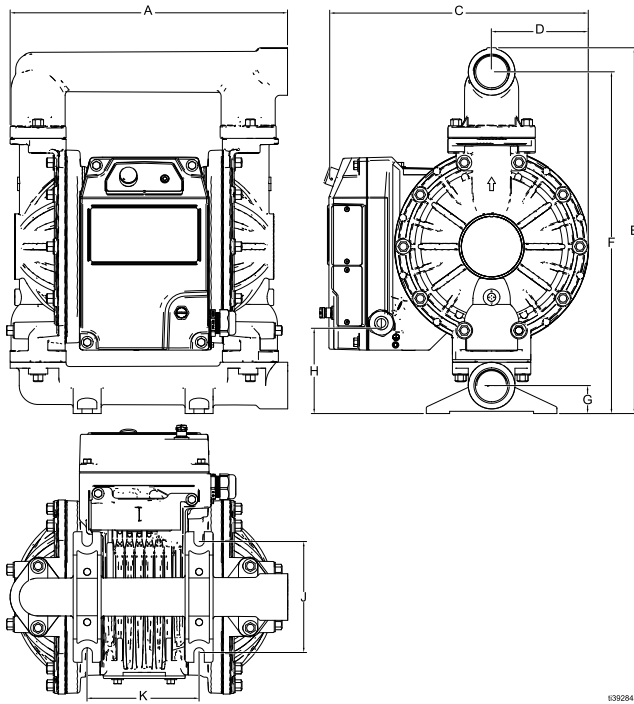


Figure 20-5: Dimension Diagram for i80 (QTD) Model with Metal Wetted Section

Ref.	Wetted Section Material			
	AL		SS	
	in.	cm	in.	cm
A	15.07	38.28	16.10	40.89
C	13.81	35.08	13.85	35.18
D	5.17	13.13	5.21	13.23
E	19.60	49.78	18.97	48.18
F	18.30	46.48	17.75	45.09
G	1.50	3.81	1.44	3.66
H	4.55	11.56	4.55	11.56
J	6.00	15.24	6.00	15.24
K	6.00	15.24	6.00	15.24

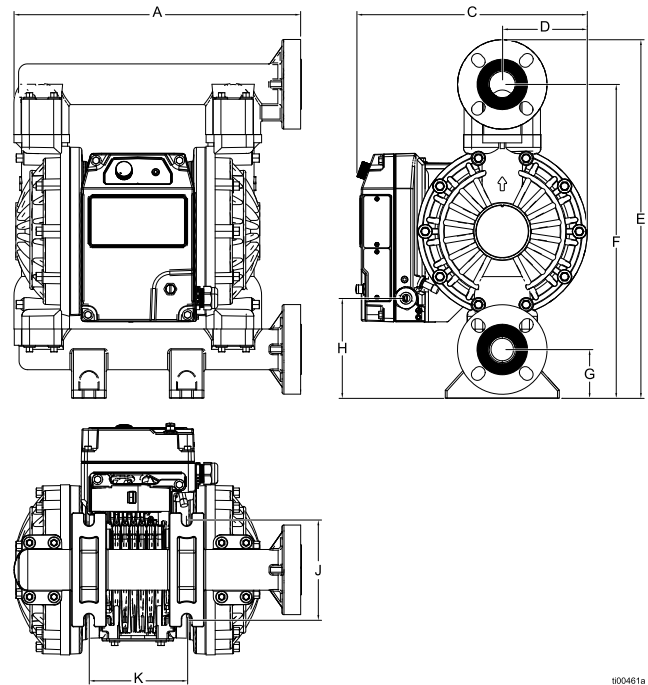


Figure 20-6: Dimension Diagram for i80 Model (QTD) with Plastic Wetted Section

Ref.	Wetted Section Material	
	CP, PP, PV	
	in.	cm
A	17.60	44.70
C	13.87	35.23
D	5.23	13.28
E	22.00	55.88
F	19.30	49.02
G	3.00	7.62
H	5.85	14.86
J	6.00	15.24
K	6.00	15.24

DIMENSIONS

DIMENSIONS FOR i120 (QTE) BALL MODELS

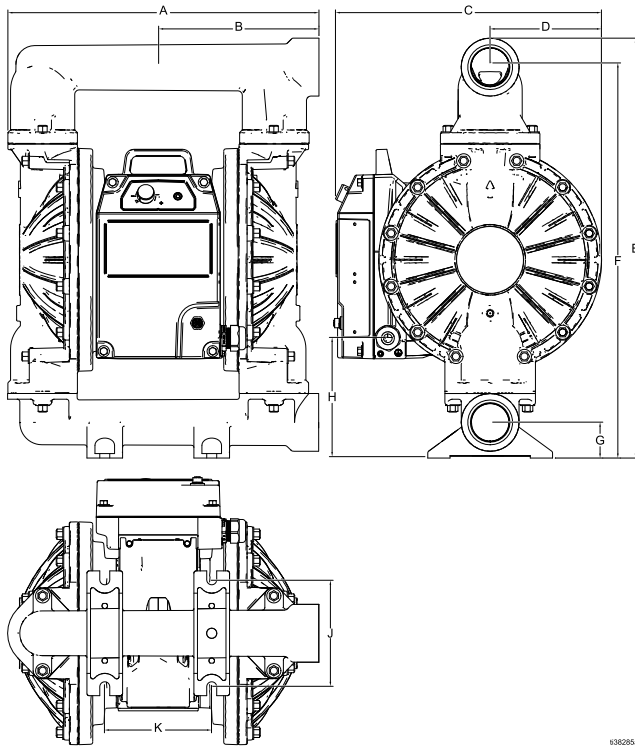


Figure 20-7: Dimension Diagram for i120 (QTE) Ball Models with Metal Wetted Section

Ref.	Wetted Section Material			
	AL		CI, SS	
	in.	cm	in.	cm
A	17.50	44.45	18.13	46.05
B	9.00	22.86	9.40	23.88
C	14.89	37.82	14.89	37.82
D	6.25	15.88	6.25	15.88
E	23.60	59.94	26.34	66.90
F	21.90	55.63	24.79	62.97
G	2.00	5.08	2.50	6.35
H	6.72	17.07	9.01	22.89
J	6.00	15.24	6.00	15.24
K	6.00	15.24	6.50	16.51

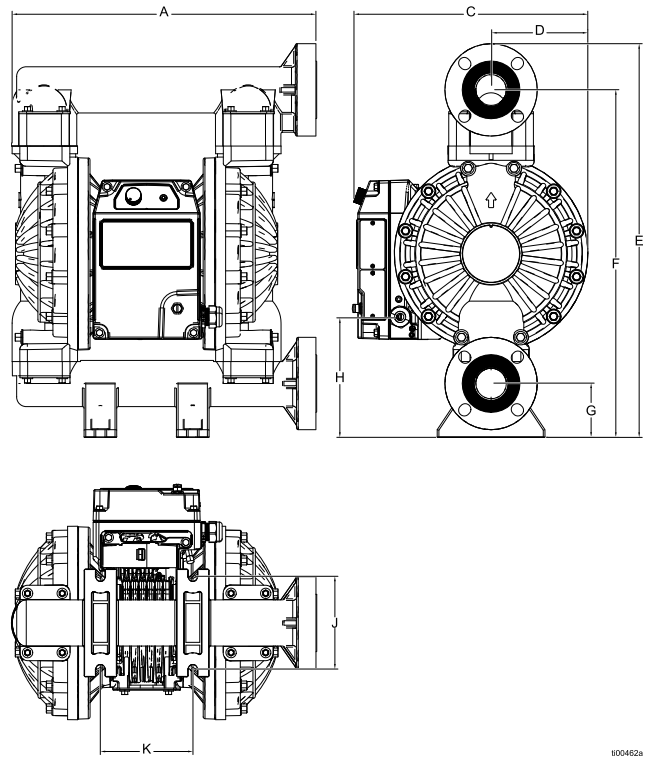


Figure 20-8: Dimension Diagram for i120 Ball Models with Plastic Wetted Section

Ref.	Wetted Section Material	
	CP, PP, PV	
	in.	cm
A	19.70	50.04
C	14.89	37.82
D	6.25	15.88
E	25.70	65.28
F	22.70	57.66
G	3.50	8.89
H	7.53	19.13
J	6.00	15.24
K	6.00	15.24

DIMENSIONS

DIMENSIONS FOR I120 (QTE) FLAPPER MODELS

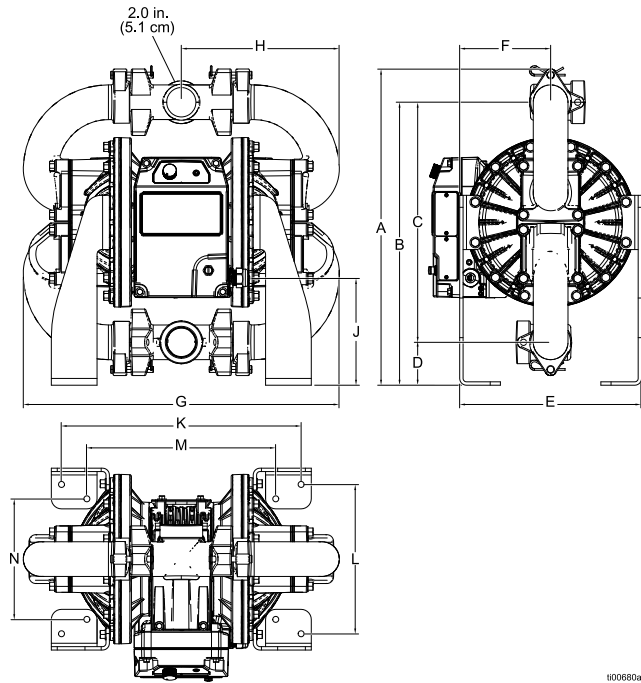


Figure 20-9: Dimension Diagram for i120 (QTE) Flapper Models with Metal Wetted Section

Ref.	Wetted Section Material	
	AL	
	in.	cm
A	23.31	59.2
B	20.86	53.0
C	17.73	45.0
D	3.16	8.0
E	13.40	34.0
F	6.70	17.0
G*	23.29	59.2
H*	11.64	29.6
J	7.91	20.1
K*	17.89	44.9
L	11.01	28.0
M*	13.95	35.4
N	8.89	22.6
Notes: * Dimensions can vary by up to 0.25 in. (6.3 mm) depending on the diaphragm material fitted in the equipment.		

CALIFORNIA PROPOSITION 65

CALIFORNIA RESIDENTS

 **WARNING** Cancer and reproductive harm – www.P65warnings.ca.gov.

GRACO STANDARD WARRANTY

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.



GRACO INC. AND SUBSIDIARIES | P.O. BOX 1441 | MINNEAPOLIS MN 55440-1441 | USA

Graco Headquarters: Minneapolis, MN USA | International Offices: Australia, Belgium, China, Japan, Korea | Toll Free Phone Number: 1-800-690-2894 (Contractor Division) and 1-800-328-0211 (Industrial Division) | For patent information, see graco.com/patents

©2026 Graco Inc. All written and visual data in this document are based on the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice. All Graco manufacturing locations maintain ISO 9001:2015 certifications, each certified by accredited certification bodies. Revision B.